




# OPERATOR'S MANUAL

## OM944W3

For Models: M944W3, M944W3G and M30CW3

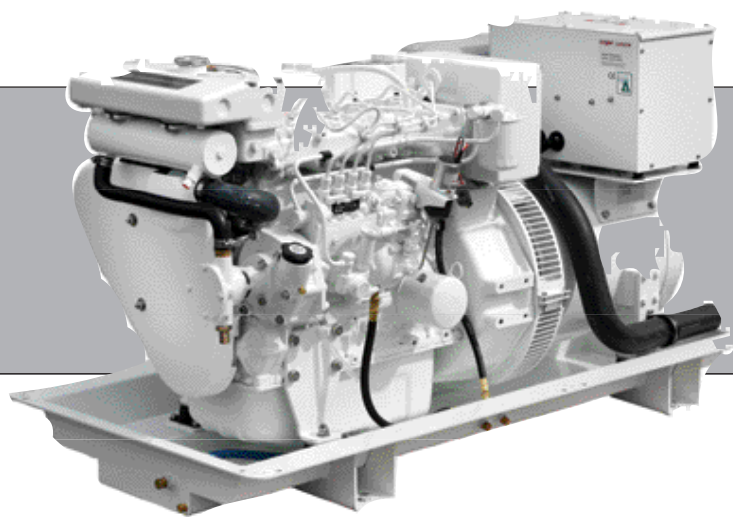

[www.northern-lights.com](http://www.northern-lights.com)



— CALIFORNIA —  
Proposition 65 Warning:

**Breathing Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.**

- \* Always start and operate the engine in a well-ventilated area.
- \* If in an enclosed area, vent the exhaust to the outside.
- \* Do not modify or tamper with the exhaust system.
- \* Do not idle the engine except as necessary.

**For more information, go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).**

**Northern Lights**  
4420 14th Avenue NW  
Seattle, WA 98107  
Tel: (206) 789-3880  
Fax: (206) 782-5455

Copyright ©2021 Northern Lights, Inc.  
All rights reserved. Northern Lights™, and  
the Northern Lights logo are trademarks of  
Northern Lights, Inc.

Printed in U.S.A.  
PART NO.: OM944W3 7/22



# OPERATOR'S MANUAL

for Models

M944W3, M944W3G and M30CW3

Read this operator's manual thoroughly before starting to operate your equipment.  
This manual contains information you will need to run and service your new unit.

## Table of Contents

<b>INTRODUCTION .....</b>	<b>2</b>
Model Numbers .....	2
Serial Numbers .....	2
<b>WARRANTY .....</b>	<b>3</b>
<b>SAFETY RULES.....</b>	<b>3 - 7</b>
<b>LOCK OUT / TAG OUT INSTRUCTIONS.....</b>	<b>8</b>
<b>COMPONENT LOCATIONS</b>	
Generator Set .....	10 - 11
<b>CONTROL PANELS</b>	
Northern Lights Generator Sets .....	14
<b>OPERATING PROCEDURES</b>	
Break-in Period.....	15
Before Starting.....	15
Starting.....	16
Operating .....	16
Stopping.....	16
Shutdowns and Alarms .....	17
Spare Parts .....	17
<b>SERVICING SCHEDULE CHART .....</b>	<b>18 - 19</b>

## SERVICING

Lubrication - General.....	20
Checking Oil.....	20
Oil Changes .....	20
Changing Oil Filter.....	21
Air Filter .....	21
V-Belts .....	21
Valve Clearances.....	22
Fuels - General.....	23
Fuel Filters .....	23
Bleeding the Fuel System .....	24
Injector Service.....	25
Injection Pump.....	26
Cooling System .....	27
Heat Exchanger.....	28
Raw Water Pump .....	28
Zinc Electrodes .....	28
Electrical System - General .....	29
Booster Batteries.....	29
Battery Care .....	30
Winterizing / Out-of-Service .....	30

## TROUBLESHOOTING

Electrical.....	31
Engine .....	32 - 34

## WIRING DIAGRAMS

AC Wiring.....	35 - 37
DC Wiring.....	38 - 45
Panel Wiring .....	46 - 49

## APPENDIX (Non-Current Production Diagrams)

AC Wiring.....	50
DC Wiring.....	51 - 54
Panel Diagrams.....	55 - 57

### Proprietary Information

This publication is the property of Alaska Diesel Electric, Inc.  
It may not be reproduced in whole or in part without the written permission of Northern Lights, Inc.  
© Northern Lights, Inc. All rights reserved. Litho U.S.A. Publication number OM944W3 7/22

---

## Introduction

---

The servicing of marine engines and generator sets presents unique problems. In many cases, boats cannot be moved to a repair facility. Marine engines cannot be compared to the servicing of automobiles, trucks, or even farm equipment. Failures often occur in remote areas far from competent assistance. Marine engines are taxed far more severely than auto or truck engines; therefore, maintenance schedules must be adhered to

more strictly. Failures begin with minor problems that are overlooked and become amplified when not corrected during routine maintenance.

As operator, it is your obligation to learn about your equipment and its proper maintenance. This is not a comprehensive technical service manual. Nor will it make the reader into an expert mechanic. Its aim is to aid you in maintaining your unit properly.

---

## Unit Identification

---

### MODELS INCLUDED

This manual covers the operating instructions for:


**M944W3, M944W3G AND M30CW3** marine generator sets, which use the 944 engine block.

---

## Model Numbers

---

Model numbers are based on the unit's application, block model, aspiration, and RPM:

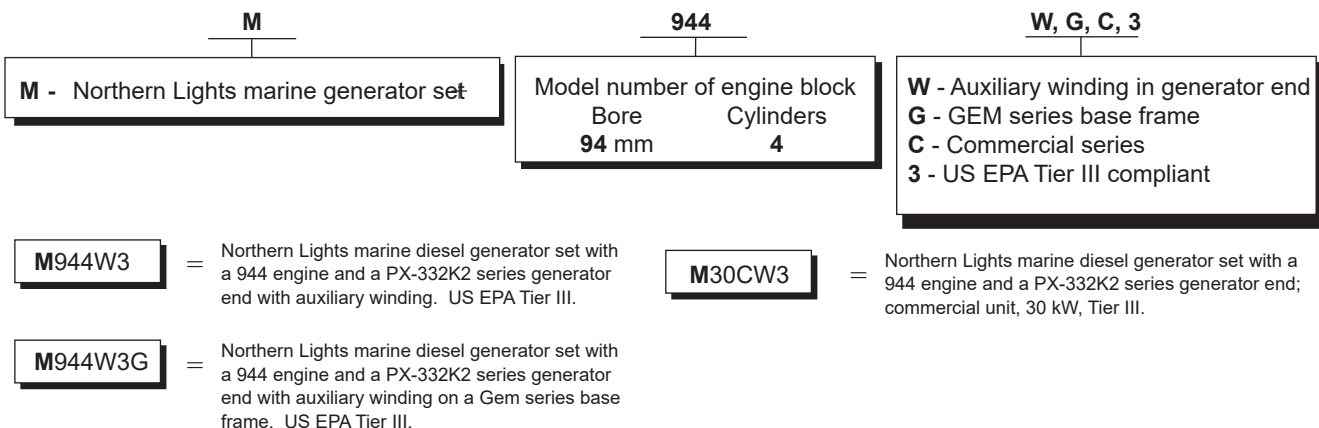

---

## Serial Numbers

---



Your set has three serial numbers: ① an engine number stamped on a plate attached to the valve cover, ② a generator end serial number, and ③ a generator set serial number.

NOTE: Always use the generator set serial number when ordering parts or in correspondence. The generator set serial number plate is found on the service side of the generator and resembles the drawing in Figure 1.

**Figure 1:** Generator set serial number plate.

## Warranty

A warranty registration certificate is supplied with your set. It entitles the original purchaser of our equipment to a warranty covering material or assembly faults. The extent of coverage is described in the Limited Warranty Statement. We recommend that you study the statement carefully.

**NOTE:** If the warranty is to apply, the servicing instructions outlined in this manual must be followed. If further information is needed, please contact an authorized dealer or the factory.

## Safety Rules

**DANGER:** Northern Lights generator sets and /or any other diesel powered equipment provided by NLI is not provided with spark arresting or explosion proof components, and therefore is not to be installed in the presence of combustible gases having a flash point of 43.3 Degrees C (110 Degrees F) or lower, such as Gasoline, Propane, Natural Gas or other similar fuel sources.



**NOTICE:** Accident reports show that careless use of engines causes a high percentage of accidents. You can avoid accidents by observing these safety rules. Study these rules carefully and enforce them on the job.

### IMPORTANT SAFETY INSTRUCTIONS.

Electromagnetic equipment, including generator sets and their accessories, can cause bodily harm and life threatening injuries when improperly installed, operated or maintained. To prevent accidents be aware of potential dangers and act safely.



READ AND FOLLOW ALL SAFETY INSTRUCTIONS IN THIS MANUAL, PRIOR TO THE INSTALLATION OF ANY GENERATOR SET OR ACCESSORY. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### Recognize Safety Symbols and Instructions

In addition to the information found in this section, this operator's manual uses three different signal words to outline potential dangers of a specific nature.



**DANGER**

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING**

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.



**CAUTION**

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

### Follow All Safety Instructions

Carefully read and understand all safety messages in this manual and on your machine's safety signs. Keep signs in good and clean condition. Replace missing or damaged signs. Be sure new equipment components and



repair parts include the current safety signs. For replacement signs, proper placement of safety signs or clarification on any safety issue, consult your Northern Lights dealer or the factory.

There can be additional safety information contained on parts and components from outside suppliers that is not reproduced in this manual. Consult the suppliers for additional safety information.

Learn how to operate the machine and how to use the controls properly. Only trained personnel should operate machines, or work on or around them.

Keep you machine in proper working condition. UNAUTHORIZED MODIFICATIONS TO THE MACHINERY MAY IMPAIR ITS FUNCTION AND SAFETY PARAMETERS.

### Prevent Bypass and Accidental Starting



**WARNING**



Do not start engine by shorting across start terminal. Engine will start if normal circuitry is bypassed, creating a hazard by runaway machinery.

Start engine only from operator's station.

## Safety Rules (Continued)

### Handle Fuel Safely - Avoid Flames

#### **! WARNING**

Diesel is highly flammable and should be treated with care at all times. Do not refuel while smoking or when near sparks or open flame.

**ALWAYS STOP ENGINE BEFORE FUELING MACHINE.** Always fill portable fuel tank outdoors. Never fuel a hot engine. Prevent accidental discharge of starting fluids by storing all cans in a cool, safe place, away from sparks or open flame. Store with cap securely on container. Never incinerate or puncture a fuel container.




Prevent fires by keeping machine clean of accumulated trash, grease and debris. Always clean any spilled fuel as swiftly as possible. Do not store oily rags, which can ignite and burn spontaneously.

Be prepared if a fire starts. Keep a first aid kit and fire extinguisher handy. Keep emergency contact numbers for fire department, doctors, ambulance and hospital near the telephone.

### Service Machines Safely

#### **! DANGER**

Do not wear a necktie, scarf, necklace, rings or other jewelry, or any loose clothing when working near moving parts. Tie long hair behind your head. If any of these items get caught in moving machinery, severe injury or death could result.

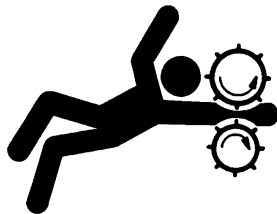

Check for any loose electrical connections or faulty wiring.


Look completely around engine to make sure that everything is clear before starting.

### Wear Protective Clothing

#### **! WARNING**

To prevent catching anything in moving machinery, always wear close fitting clothes and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause hearing loss or impairment. Wear suitable authorized hearing protection, such as earmuffs or plugs to protect against loud noises.

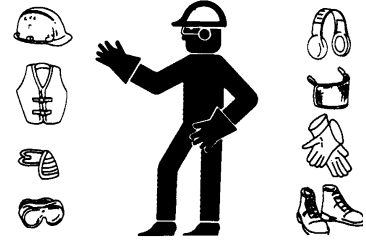

Operating equipment requires the full attention of the operator. Do not use radio or music headphones while operating machinery.

### Practice Safe Maintenance

#### **! CAUTION**

Understand all service procedures before starting work.

Keep area clean and dry. Never lubricate, service, or adjust machine while it is in operation.



Keep hands, feet and clothing away from power-driven equipment. When shutting down an engine, disengage all power and operator controls. Allow the engine to cool completely before beginning any service work.

*Securely support any machinery elements that must be raised for service work with support or lifting machinery specifically intended for that purpose.*

Keep all parts in good conditions and properly installed. Fix damage immediately. Replace any worn or broken parts. Remove any build up of grease, oil or debris.

Disconnect battery ground cable (-) before making any adjustments or service work.

## Safety Rules (Continued)

### Stay Clear of Rotating Drivelines

#### DANGER

Entanglement in rotating drivelines can cause serious injury or death. Keep shields in place at all times. Make sure that rotating shields turn freely in pace with the drivelines.



Do not wear loose fitting equipment around rotating drivelines. Stop the engine and make sure that all moving parts have stopped before making any adjustments, connections, or performing any other type of service to the engine or other driven equipment.

### Install all Safety Guards

#### WARNING

Direct contact with rotating fans, belts, pulley and drives can cause serious injury.

Keep all guards in place at all times during engine operation.



Wear close-fitting clothes. Stop the engine and be sure all fans, belts, pulleys and drives are stopped before making adjustments, connections, or cleaning near fans and their components.

Do not allow anything on your person to dangle into or come in contact with a moving fan, belt, pulley or drive. Fans can act as vacuums and pull materials up from below, so avoid that area as well while in service.

### Safe Battery Handling

#### WARNING

#### Prevent Battery Explosions

Battery gas is highly flammable. Battery explosions can cause severe injury or death. To help prevent battery explosions, keep sparks, lighted matches and open flame away from the top of battery. When checking battery electrolyte level, use a flashlight.

Never check battery charge by contacting the posts with a metal object. Use a volt-meter or hydrometer.



Frozen batteries may explode if charged. Never charge a battery that has not been allowed to warm to at least 16°C (60°F).

Always remove grounded (-) battery clamp first and replace ground clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes into clothing and other materials, and cause blindness if splashed into eyes.

#### To Avoid Hazards:


- Fill batteries only in well-ventilated areas.
- Wear appropriate eye protection and rubber gloves.
- Never use air pressure to clean batteries.
- Wear appropriate ventilation equipment to avoid inhaling fumes when adding electrolyte.
- Do not spill or drip electrolyte.
- Use correct jump-start procedure if required.

#### If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize acid.
3. Flush eyes with water for 15-30 minutes.
4. Get medical attention immediately.

#### If acid is swallowed:

1. DO NOT induce vomiting.
2. Drink large amounts of water or milk, without exceeding 2 liters (2 quarts)
3. Get medical attention immediately

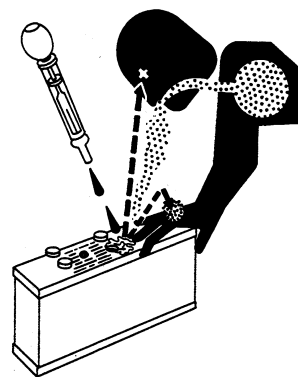

#### WARNING

Battery posts, terminals, and related accessories can contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.




## Safety Rules (Continued)

### Handle Chemical Products Safely

#### ! WARNING

Direct exposure to hazardous chemicals can cause serious injury. Among the potentially hazardous chemicals that may be used with Northern Lights products are lubricants, coolants, paints and adhesives.

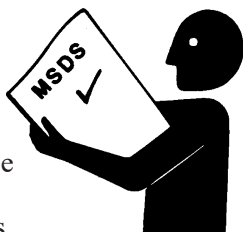

All potentially hazardous chemicals come with a Material Data Safety Sheet (MSDS). The MSDS provides specific details on chemical products, including physical hazards, safety procedures and emergency response techniques.

Read and understand the MSDS for each chemical before you start any job that includes it. Follow the procedures and use appropriate equipment exactly as recommended.

Contact your Northern Lights dealer or Northern Lights factory for MSDS's used on Northern Lights products.

### Work in Well Ventilated Areas


#### ! CAUTION

Exhaust fumes from engines contain carbon monoxide and can cause sickness or death. Work in well ventilated areas to avoid prolonged exposure to engine fumes. If it is necessary to run an engine in an enclosed area, route the exhaust fumes out of the area with an approved, leak proof exhaust pipe extension.

### Remove Paint Before Welding or Heating

#### ! WARNING

Hazardous fumes can be generated when paint is heated by welding, soldering or using a torch. To avoid potentially toxic fumes and dust, remove paint before heating.

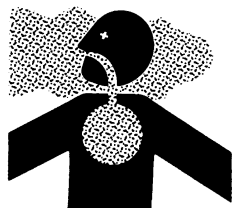

- Remove paint a minimum of 100 mm (4 in.) from the area that will be affected by heat.
- If paint cannot be removed, wear an approved respirator.
- If you sand or grind paint, use an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers from the area.
- Allow at least 15 minutes for fumes to disperse before welding or heating.

Do not use a chlorinated solvent in an area where welding will occur. Work only in areas that are well ventilated. Dispose of paint and solvent properly.

### Service Cooling System Safely

#### ! WARNING

Opening a pressurized cooling system can release explosive fluids and causing serious burns. Before opening any pressurized cooling system, make sure the engine has been shut off. Do not remove a filler cap unless it is cool enough to comfortably grip with bare hands. Slowly loosen cap to relieve pressure before opening fully.



### Avoid High Pressure Fluids

#### ! WARNING

Relieve pressure prior to disconnecting pressurized lines. Escaping fluid under pressure can penetrate the skin causing serious injury.

Always relieve pressure before disconnecting hydraulic or other pressurized lines. Tighten all connections firmly before re-applying pressure.



If searching for leaks, use a piece of cardboard. Always protect your hands and other body parts from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any high pressure spray injected into the skin must be removed within a few hours to prevent the risk of gangrene or other infection.

### Avoid Heating Near Pressurized Fluid Lines

#### ! WARNING

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns and bodily injury. Pressurized lines can rupture when heat goes beyond the immediate flame area. Do not weld, solder or use a torch or open flame near pressurized lines or other flammable fluids.





## Safety Rules (Continued)

### Do Not Open High-Pressure Fuel System

#### DANGER



Many Northern Lights engines use high-pressure fuel injection. High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt any repair of fuel lines, sensors, or other components between the high-pressure fuel pump and nozzles on engines with high pressure fuel systems.

ONLY AUTHORIZED TECHNICIANS CAN PERFORM REPAIRS ON AN HIGH PRESSURE FUEL INJECTION SYSTEMS.

### Avoid Hot Exhaust

#### WARNING

Avoid exposure to and physical contact with hot exhaust gases. Exhaust parts and streams can reach high temperatures during operation, leading to burns or other serious injury.

Cleaning exhaust filters can also lead to exposure to hot exhaust gas and the injury risk associated with it. Avoid exposure to and physical contact with hot exhaust gases when cleaning exhaust filters.


During auto or manual/stationary exhaust filter cleaning operations, the engine will run at elevated temperatures for an extended period of time. Exhaust parts and streams can reach high temperatures during operation, leading to burns or other serious injury.

### Avoid Harmful Asbestos Dust

#### WARNING

Inhaling asbestos fibers may cause lung cancer. Avoid breathing any dust that may be generated when handling components containing asbestos fibers, including some gaskets.

The asbestos used in these components is usually found in a resin or otherwise sealed. Normal handling of these components is not dangerous, as long as airborne dust containing asbestos is not generated.

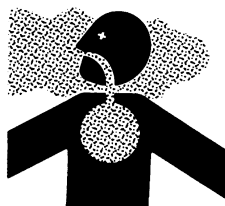

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding materials containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If this vacuum is not available, apply a mist of oil or water on the material containing asbestos. Keep all bystanders away from any area where asbestos dust may be generated.

### Use Proper Lifting Equipment and Techniques

#### WARNING

Lifting heavy components incorrectly can cause severe injury or damage to machinery. Avoid unbalanced loads. Do not use lifting eyes. Lift the generator set using lifting bars inserted through the lifting holes on the skid. Follow all recommended removal and installation procedures in this and associated Northern Lights manuals.



### Use Proper Tools

#### CAUTION

Makeshift tools and procedures can create safety hazards. Always use appropriate tools for the job.

Use power tools only to loosen threaded parts and fasteners. For loosening and tightening hardware, always use the correct sized tools.

Do not use US measurement tools on metric fasteners, or vice versa. Use only service parts that meet Northern Lights specifications.

### Dispose of Waste Properly

#### CAUTION

Disposing of waste improperly can threaten the environment and lead to unsafe working conditions. Potentially harmful waste used in Northern Lights equipment can include oil, fuel, coolant, filters and batteries.

Use leakproof containers to drain fluid. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain or into any water source.



## Lock Out / Tag Out Procedures

### Scope

During maintenance, repairs or retooling of a Northern Lights generator set, simply turning the machine off or unplugging it while it is being worked on does not give enough protection to others who are not performing the maintenance or repair. Many serious accidents happen when someone thought the machine was turned off, or all of its energy was safely blocked or released.

### General Policy

#### CAUTION

To avoid dangerous or hazardous situations, refrain from any of the following:

- Removing or bypassing a guard or other safety device
- Placing any part of your body in a position where you could be caught by moving machinery.
- Cleaning or oiling machinery when in operation.
- Adjusting circuits, chillers, pumps, air handlers, valves, circuit breakers or fans while in operation.
- Working on piping or high pressure systems.

### Lock Out/Tag Out Instructions - Electrical Equipment

#### WARNING

Be sure the equipment's ON/OFF switch is in the OFF position and is unplugged from any electrical source before attempting to perform any type of work on the equipment. Obtain an electrical plug cap cover with a lockset. Secure the plug terminal end using the electrical plug lockout cap. Lock the cap and retain the key.

If the equipment is directly wired into an electrical box with a shut off switch, obtain a lock pad and/or the appropriate colored tags and place the lock and tag through the shut off lever. Retain the key until the repair is completed and the machine is safe to start. Be certain the shut off lever is in the OFF position before restarting. NEVER give a lock out key to unauthorized personnel.

If the equipment is directly wired into an electrical box without a shut off switch and lock out capability, then a circuit breaker lock out will be required. Obtain a circuit lock and tag set. Install the lock onto the circuit breaker box. Ensure the unit ON/OFF switch is in the OFF position before restarting.

### Lock Out/Tag Out Instructions - Pneumatic and Hydraulic Equipment

#### WARNING

For servicing pneumatic and hydraulic equipment, the following additional procedures must be implemented, following completion of lock out/tag out procedures for the unit to be serviced:

Shut off air, water or supply valves at the equipment to be serviced.

Check the local bleed-off point for completed release of pressurized air, water or oil.

If shutting off of air, water or other material cannot be achieved at the local supply valve, shut off valves further back in the system and re-check the bleed-off point until complete shut-off is achieved.

Affix a DO NOT OPERATE tag to each valve handle that requires shut off. Each DO NOT OPERATE tag must be signed and dated by the authorized technician servicing the equipment.

### Lock Out/Tag Out Instructions - Air Hose Connected Pneumatic Equipment

#### WARNING

Equipment connected to the compressed air system through an air hose with a detachable fitting must be shutdown and unplugged. Excess air must be bled prior to removing the air hose, prior to any maintenance or repair activities.

Affix a DO NOT OPERATE tag to the air hose near the detachable fitting. Each DO NOT OPERATE tag must be signed and dated by the authorized technician servicing the equipment. Check that the equipment cannot be operated by activating the ON switch.

### Stored Energy

#### WARNING

Immediately after applying Lock Out or Tag Out devices, ensure that all potentially hazardous stored or residual energy is relieved, disconnected, restrained and otherwise rendered safe.

### Verification of Isolation

#### CAUTION

Verify the machinery or equipment is actually isolated and de-energized prior to beginning work on a machine or on equipment that has been locked out.

### Restarting Procedures

#### CAUTION

Follow the procedures below prior to restoring energy:


- Ensure that all machinery or equipment is properly reassembled. Inspect the machinery or equipment to verify non-essential items have been removed.
- Ensure that all personnel are safely outside danger zones. Notify personnel that lock out/tag out devices have been removed and energy will be reapplied.
- Only authorized personnel may remove lock out/tag out devices or notices.

---

## Notes

---


## M944W3 Generator Set Component Locations

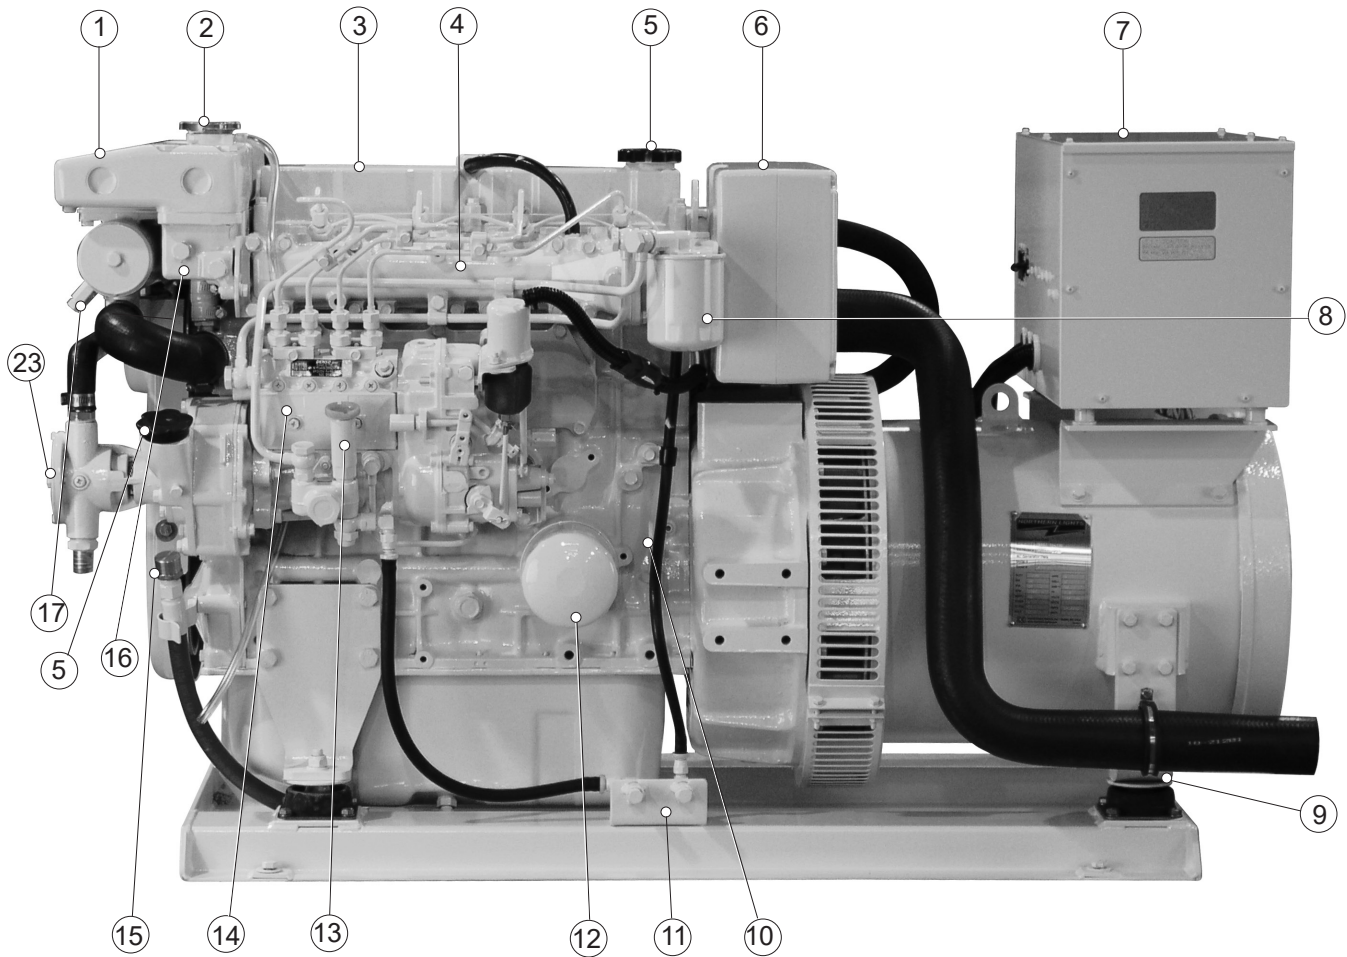

**Figure 2:** M944W3 Service Side with PX-300K2 series generator end.

- |                     |                       |                              |
|---------------------|-----------------------|------------------------------|
| 1. Expansion Tank   | 8. Fuel Filter        | 15. Lube Oil Drain           |
| 2. Coolant Fill     | 9. Vibration Mounts   | 16. Thermostat Housing       |
| 3. Rocker Arm Cover | 10. Lube Oil Dipstick | 17. Heat Exchanger Raw Water |
| 4. Intake Manifold  | 11. Fuel Manifold     | Drain and Zinc               |
| 5. Lube Oil Fill    | 12. Oil Filter        | 23. Raw Water Pump           |
| 6. Air Filter       | 13. Fuel Primer Pump  |                              |
| 7. Junction Box     | 14. Injection Pump    |                              |

## M944W3 Generator Set Component Locations

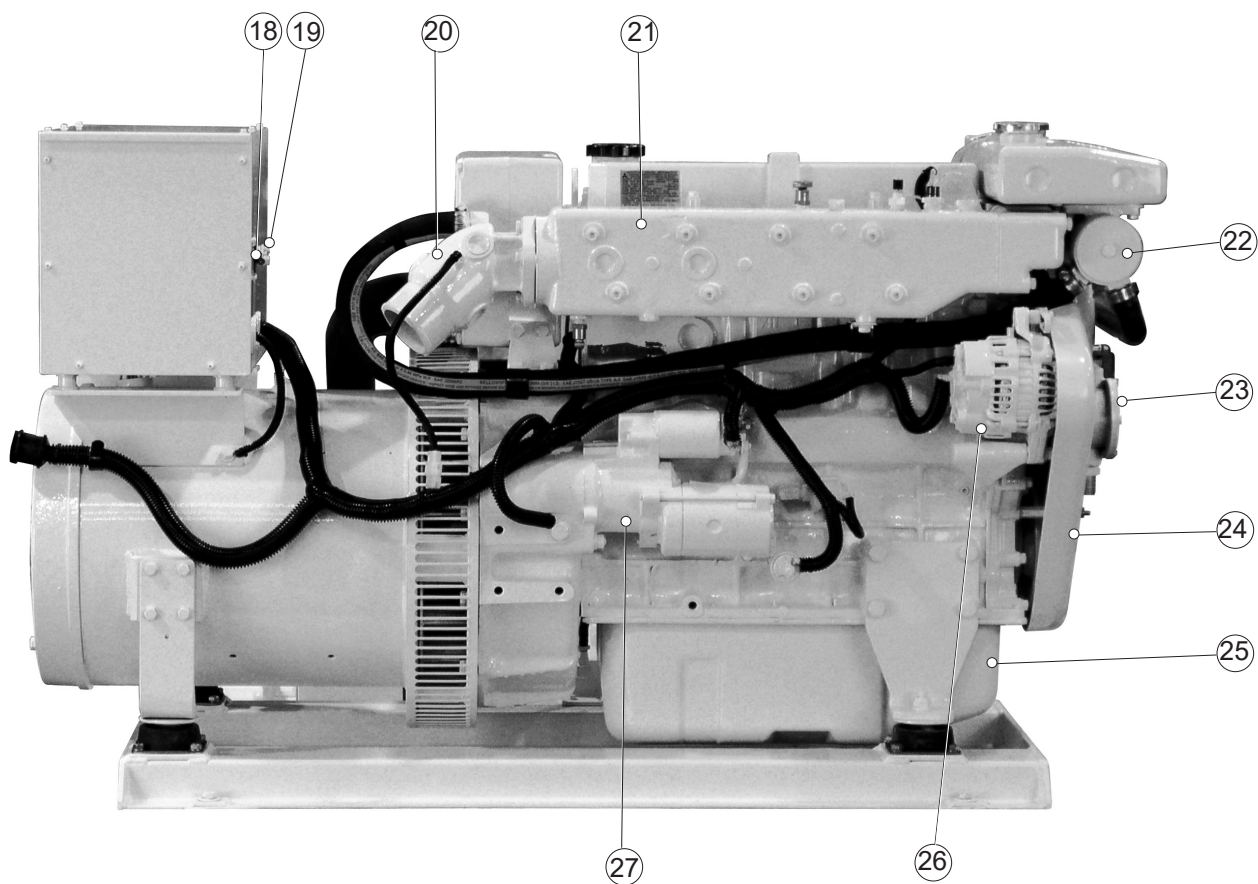


*Figure 3: M944W3 Non-Service Side with PX-300K2 series generator end.*

- |                               |                       |
|-------------------------------|-----------------------|
| <b>18.</b> AC Circuit Breaker | <b>24.</b> Belt Guard |
| <b>19.</b> DC Circuit Breaker | <b>25.</b> Oil Pan    |
| <b>20.</b> Wet Exhaust Elbow  | <b>26.</b> Alternator |
| <b>21.</b> Exhaust Manifold   | <b>27.</b> Starter    |
| <b>22.</b> Heat Exchanger     |                       |
| <b>23.</b> Raw Water Pump     |                       |



## M944W3 Generator Set Component Locations

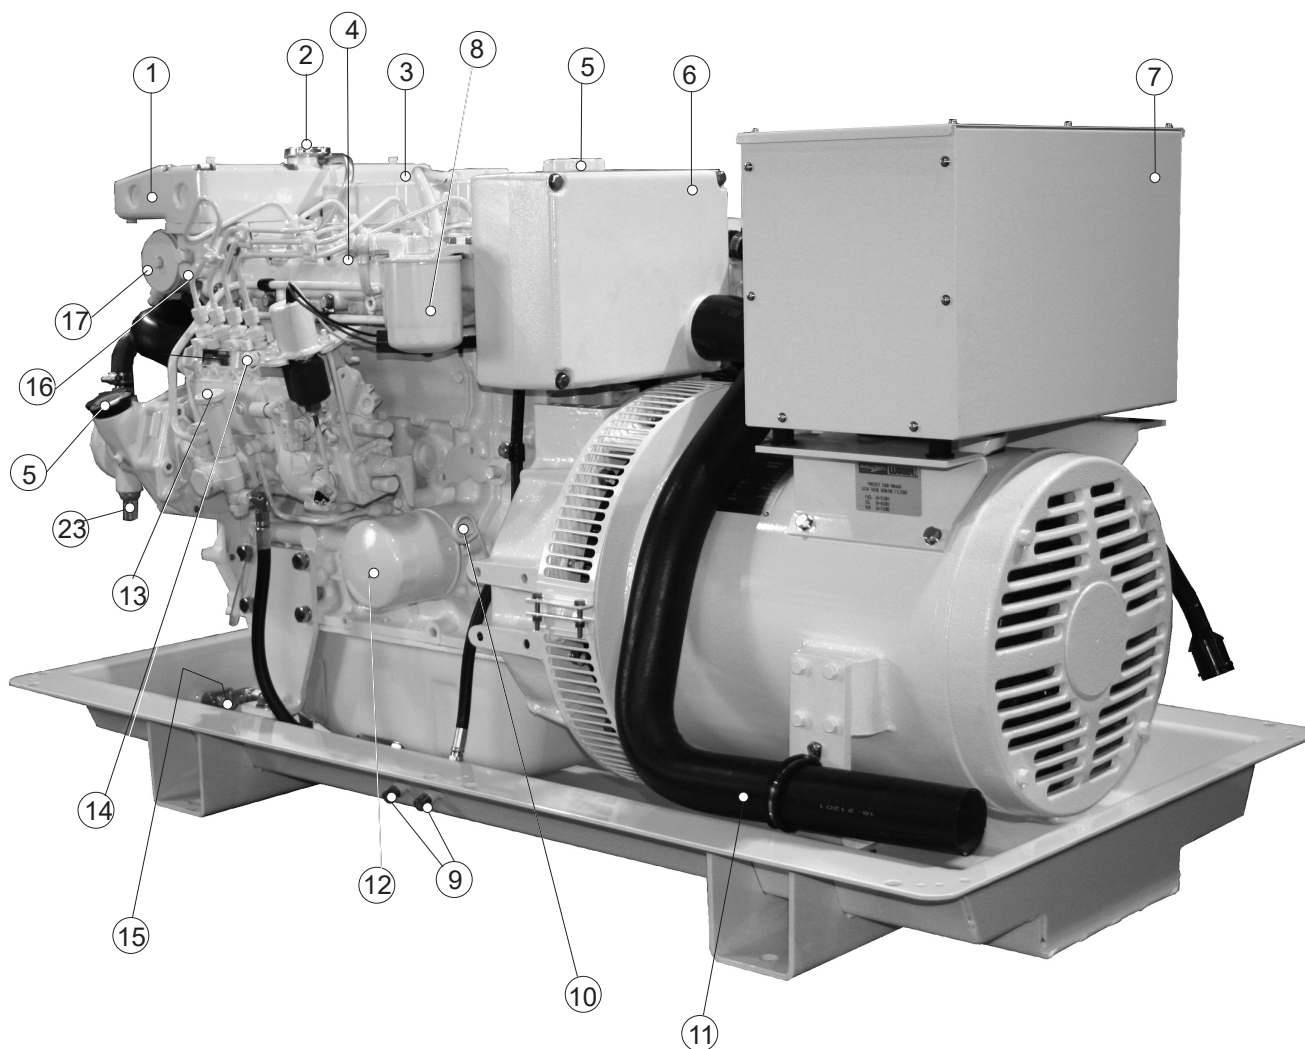


**Figure 2:** M944W3 Service Side with PX-300K2 series generator end and new baseframe.

- |                     |                                     |  |
|---------------------|-------------------------------------|--|
| 1. Expansion Tank   | 8. Fuel Filter                      | 14. Injection Pump                               |
| 2. Coolant Fill     | 9. Fuel Supply & Return Connections | 16. Thermostat Housing                           |
| 3. Rocker Arm Cover | 10. Lube Oil Dipstick               | 17. Heat Exchanger with Raw Water Drain and Zinc |
| 4. Intake Manifold  | 11. Intake Air Noise Reduction Tube | 19. Vibration Isolating Mounts                   |
| 5. Lube Oil Fill    | 12. Oil Filter                      | 23. Raw Water Pump                               |
| 6. Air Filter       | 13. Fuel Primer Pump                |  |
| 7. Junction Box     |                                     |  |



## M944W3 Generator Set Component Locations

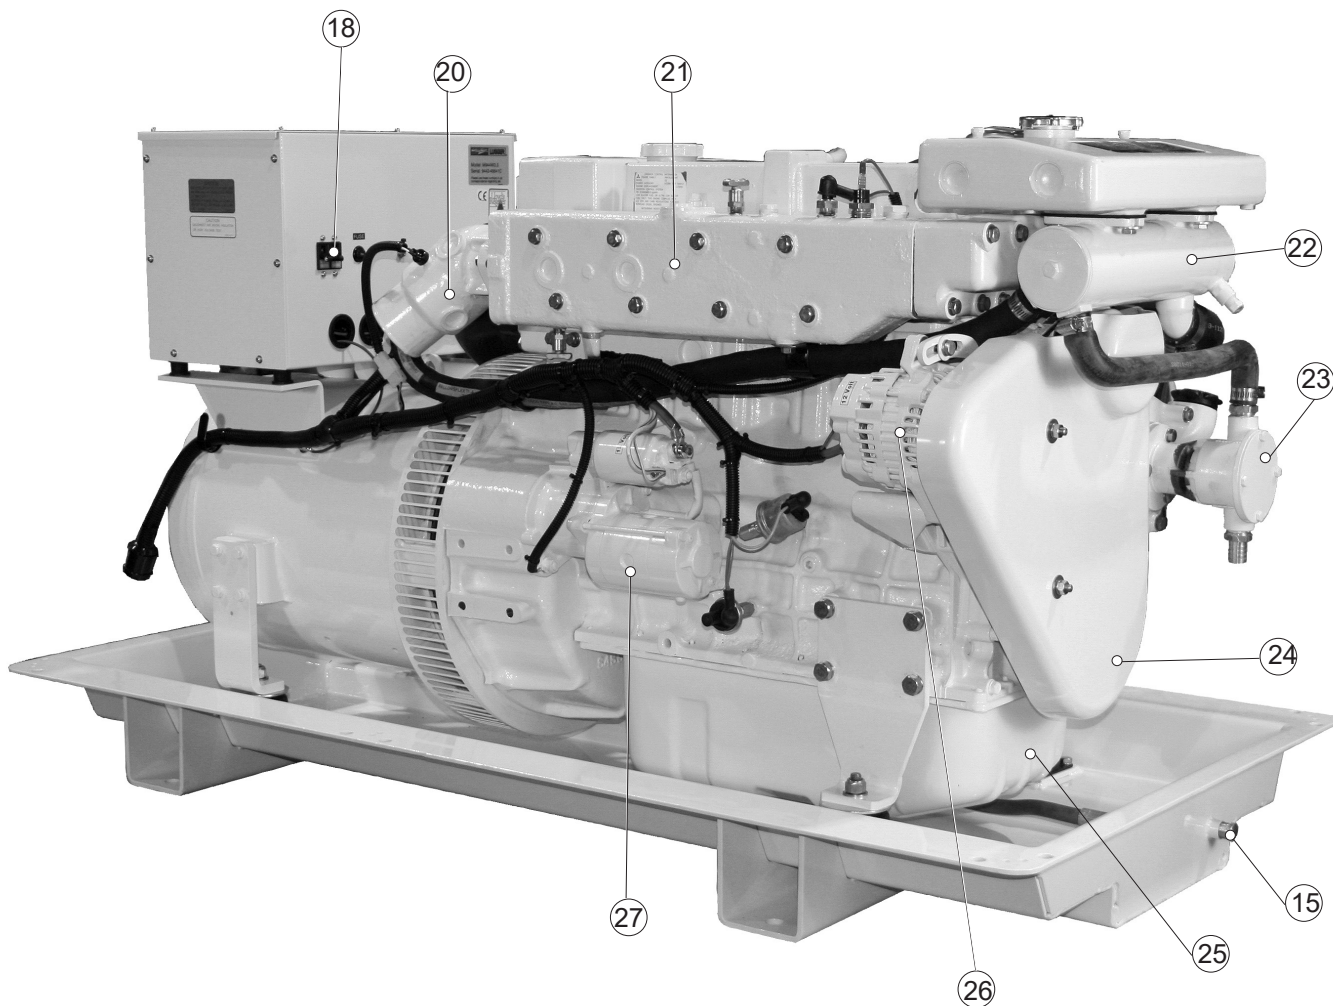

**Figure 3:** M944W3 Non-Service Side with PX-300K2 series generator end and new baseframe.

- |                        |                |
|------------------------|----------------|
| 15. Lube Oil Drain     | 24. Belt Guard |
| 18. AC Circuit Breaker | 25. Oil Pan    |
| 20. Wet Exhaust Elbow  | 26. Alternator |
| 21. Exhaust Manifold   | 27. Starter    |
| 22. Heat Exchanger     |                |
| 23. Raw Water Pump     |                |

## Control Panels

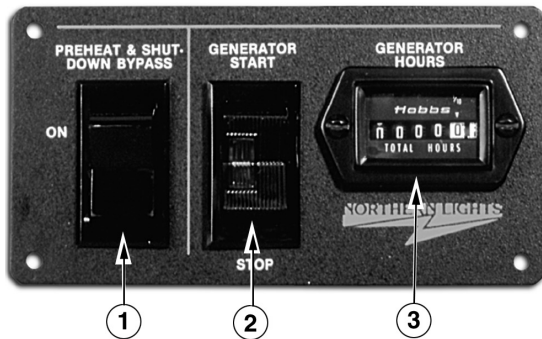


Figure 4-A: Series 1-B Generator Control Panel

### 1. PREHEAT/ SHUTDOWN BYPASS

This switch serves two functions:

1. Preheats air before beginning the starting process. Press switch for 10-20 seconds before attempting startup.
2. Bypasses the safety shutdown feature during the starting process. Keep switch engaged while starting engine, and for 2 to 3 seconds afterwards, allowing oil pressure to build beyond shutdown setpoint.

### 2. ENGINE CONTROL SWITCH

To start the engine, hold this switch in the START position until the engine is running. After the engine starts, release the switch and it will return to RUN position. To stop the engine, hold the switch in the STOP position.

**NOTE:** The rocker switch is used on Series 1 panels only, and has a light that glows when the set is running.

### 3. HOUR METER

Keeps track of engine running time.

### 4. OIL PRESSURE GAUGE

Shows the oil pressure in the engine lubricating system.

### 5. WATER TEMPERATURE GAUGE

Registers the temperature of the cooling water.

### 6. D.C. VOLTMETER

When the engine is stopped, the voltmeter indicates the condition of the battery. When the engine is running, the voltmeter indicates the voltage output of the alternator.



Figure 4-B: Series 3 Generator Control Panel

**For Series 4 Control Panels only:**

### 7. A.C. VOLTMETER

Shows the generator output voltage.

### 8. FREQUENCY METER (Hertz)

The frequency meter indicates alternating current frequency: 60 Hz (1800 rpm) or 50 Hz (1500 rpm).

### 9. AMMETER/VOLTMETER SELECTOR

Used to check the voltage and current of each phase. Return to "Amps Off" position when not monitoring.

### 10. A.C. AMMETER

Shows the generator load on each phase. The phase is selected with the Ammeter Selector switch (#9).

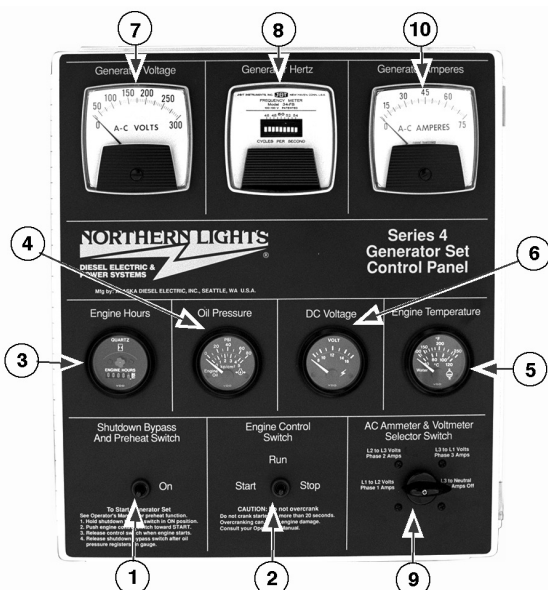


Figure 4-C: Series 4 Generator Control Panel

---

## Operating Procedures

---

### BREAK-IN PERIOD

1. The first 100 hours on a new or reconditioned engine are critical to its life and performance.
2. Operate the engine under various conditions, particularly heavy loads with minimal idling, to help seat engine components properly.
3. Constantly check the engine temperature and oil pressure gauges.
4. Oil consumption is greater during break-in as piston rings take time to seat.
5. Break-In Oil Changes: Change engine oil and filter at 50 hours. Change oil and filter again at 100 hours (consult Lubricants section for oil recommendation).

### BEFORE STARTING

1. Check the water level by removing the pressure cap from the expansion tank. In order to give the cooling water an opportunity to expand, the level should be about 1 in. (2.5 cm) below the filler cap sealing surface when the engine is cold.



***CAUTION: Use protective clothing and open the filler cap carefully when the engine is warm to prevent burns.***

---

2. Check the oil level in the crankcase with the dipstick. The oil level must be between high and low marks on the stick. Never allow the level to go below this area. Always add the same viscosity of oil as is already in the crankcase.
3. Check the fuel tank level and open any fuel valves on the tank and at the secondary fuel filter.
4. Close the sea-cock, check and clean the sea strainer, and reopen the sea-cock.
5. Place the battery switch in the ON position.

**NOTE: The battery switch must always be kept ON while the engine is running. If the switch is turned OFF while the engine is running, the battery charging alternator could be damaged.**

---

## Operating Procedures

---

### STARTING

1. Hold the Shutdown Bypass switch in the ON position.
2. While holding the Shutdown Bypass switch in the ON position, push the Engine Control switch to the START position.
3. As soon as the engine starts, release the start switch and continue to hold the bypass/preheat switch for an additional five seconds. Do not crank the starter for more than 10 seconds consecutively. If the engine fails to start with the first attempt, be sure that it has stopped completely before re-engaging.

**NOTE: Excessive cranking of the starter on marine sets equipped with a water lift muffler can cause engine damage. If the engine does not start after 3 consecutive 20-second cranks, remove the impeller from the seawater pump. This will prevent the muffler from filling with water and backfilling the exhaust line and engine. Once the engine starts, shut it off immediately and reinstall the impeller. Restart and check the exhaust overboard outlet for gushes of water.**

### OPERATING

1. Units with Series 3 and Series 4 Control Panels: check gauges often. Oil pressure must be above 15 PSI. The D.C. voltmeter should read between 11 and 15 volts at 80° F (25° C) ambient temperature. The water temperature gauge must be below 200° F (94° C). Check the A.C. voltage and frequency meters (Series 4 panel). If the gauges deviate from normal levels, shut down the generator set and investigate.
2. Let the unit run unloaded for a three to five minute warm-up period.
3. Add electrical load.

### STOPPING

1. Remove electrical load from the generator set.
2. Run the engine for a three to five minute cool-down period.
3. Move the Engine Control switch to the STOP position until the engine stops completely.
4. Shut off seacock, fuel valve, and battery switch.

## Operating Procedures

### SHUTDOWNS AND ALARMS

1. Your unit is fitted with a system to protect it from high water temperature, low oil pressure, and high exhaust temperature.
  - a. Generator sets have shutdown systems to stop the engine. They have no warning horns.
  - b. Other alarms and shutdowns are available as optional equipment.

**NOTE: If your unit is equipped with optional shutdowns and alarms, do not rely on your warning or shutdown system to the exclusion of careful gauge monitoring. Watching your gauges can prevent damage to the unit and dangerous power losses.**

2. Do the following when your warning or shutdown system is activated:
  - a. Engage the preheat switch to check the temperature gauge.
  - b. If above 205°F (96°C), use the Troubleshooting Guide on page 25 to isolate the cause of the over-heat.



**CAUTION:** *Do not remove the water fill cap of an overheated engine. Escaping high temperature steam can cause severe burns. Allow the engine to cool and then remove the cap slowly using protective clothing.*

- c. Make repairs and restart after the temperature gauge registers below 200° F (94° C).
  - d. Watch the temperature gauge regularly and turn off the unit if the temperature rises above 205° F (96° C). Repeat troubleshooting.
3. If shutdown is activated and the temperature gauge shows temperature within normal temperature range:
  - a. This shutdown could have happened because of a too high exhaust temperature. This could have been caused by a damaged impeller or a partially blocked sea water strainer. Check the sea water strainer first. If it is clear, then check the condition of the sea water pump impeller.
  - b. Check the engine crankcase oil level.

- c. If the oil level is low, fill with recommended lubricating oil and restart. Watch the oil pressure gauge carefully and shut off the engine if it does not show a normal reading (20-60 PSI) after a few seconds of operation.
  - d. If the oil level is normal, DO NOT restart the engine. Call your dealer for assistance.

### SPARE PARTS

1. ADE recommends that you keep the following spare parts on hand for field service. The parts are available from your local Northern Lights dealer. Some marine models may already have "On-Board Kits," a handy box that contains the most common parts you will need.
  - a. Primary and secondary fuel filter elements
  - b. Oil filters
  - c. Air filter elements
  - d. Alternator belt
  - e. Thermostat and gaskets
  - f. Seawater pump impeller and gaskets
  - g. Glow plugs
  - h. Injector and washer
2. If your set is operating a long distance from a servicing dealer, add the following:
  - a. Complete set of injectors
  - b. Copper washers for injector change
  - c. Complete set of glow plugs
  - d. Fuel lift pump

## Servicing Schedule Chart

The Servicing Schedule Chart below shows the service schedule required for proper maintenance of your generator set. More detailed coverage of each Service Point (SP) is listed on the page noted in the 'page' column.

### DAILY:

- SP1 Check oil level in engine
- SP8 Check primary fuel filter
- SP14 Check cooling water level
- Check sea strainer

### AFTER FIRST 50 HOURS:

- SP2/3 Change engine oil and filter
- SP5 Check V-belt tension
- SP7 Adjust valves
- SP19 Check electrolyte level in batteries

### EVERY 50 HOURS:

- SP5 Check V-belt tension
- SP19 Check electrolyte level in batteries

### AFTER FIRST 100 HOURS:

- SP2/3 Change engine oil and filter

### EVERY 250 HOURS:

- SP2/3 Change engine oil and filter
- SP4 Check air cleaner
- SP18 Check zinc electrodes

### EVERY 500 HOURS:

- SP6 Check valve clearances
- SP9 Change primary fuel filter element
- SP10 Change secondary fuel filter
- SP12 Check injectors
- SP15 Check cooling system
- SP17 Change impeller
- SP20 Check state of charge of batteries

### EVERY 2000 HOURS or as needed:

- SP13 Check fuel injection pump
- SP16 Check and clean heat exchanger

SERVICE POINT	PAGE	OPERATION	DAILY	50 Hours	100 Hours	250 Hours	500 Hours	2000 Hours
<b>ENGINE:</b>								
SP1	20	Check oil level	●					
SP2	20	Change engine oil <sup>1,5</sup>		●		●		
SP3	21	Change lube oil filters <sup>1,5</sup>		●		●		
SP4	21	Check air cleaner <sup>1,4</sup>				●		
SP5	21	Check V-belt tension <sup>1</sup>					●	
SP7	22	Check valve clearances <sup>5</sup>					●	
<b>FUEL SYSTEM:</b>								
SP8	23	Check primary filter <sup>2</sup>	●					
SP9	23	Change primary filter element <sup>2,3</sup>					●	
SP10	23	Change secondary fuel filter <sup>1,3</sup>					●	
SP11	24	Bleed the fuel system <sup>3</sup>						
SP12	25	Check injectors <sup>1,7</sup>					●	
SP13	26	Check fuel injection pump						●
<b>COOLING SYSTEM:</b>								
SP14	27	Check cooling water level	●					
SP15	27	Check and flush cooling system <sup>8</sup>					●	●
SP16	28	Check and clean heat exchanger						●
SP17	28	Change impeller in raw water pump <sup>1,3</sup>					●	
SP18	28	Check zinc electrodes <sup>4</sup>				●		
<b>ELECTRICAL SYSTEM:</b>								
SP19	29	Check electrolyte level in batteries <sup>1,4</sup>		●				
SP20	29	Check condition of batteries with hydrometer <sup>1</sup>					●	
<b>OUT OF SERVICE:</b>								
SP23	30	Winterizing or out-of-service <sup>3</sup>						

1) Perform all maintenance once a year even if hour level has not been reached.

2) Consult manufacturer's maintenance schedule, note on chart.

3) Whenever necessary.

4) More often if necessary.

5) After first 50 hours.

6) Adjust at first 100 hours.

7) Fuel inj. valve opening pressure: 11.77 MPa (120 kgf/cm<sup>2</sup>) 1710 PSI

8) Or every 1 year



<div style="text-align: center; border: 1px solid black; padding: 5px;">Service Record</div>											
Service Point	OPERATION	HOURS/ DATE									
50 HOURS											
SP5	Check V-belt tension										
SP19	Check electrolyte in batteries										
250 HOURS											
SP2	Change engine oil										
SP3	Change lubricating oil filters										
SP4	Check air cleaner										
SP18	Check zinc electrodes										
EVERY 500 HOURS											
SP7	Check valve clearances										
SP8	Change primary filter element										
SP10	Change secondary fuel filter										
SP12	Check injectors										
SP15	Check cooling system										
SP17	Change impeller in seawater pump										
SP20	Check condition of batteries with hydrometer										
2000 HOURS or as required											
SP13	Check fuel injection pump										
SP15	Flush cooling system										
SP16	Check and clean heat exchanger										
<b>Service Notes:</b>   											

## Servicing

### LUBRICATION - GENERAL

1. Use only clean, high quality lubricants stored in clean containers in a protected area.
2. These lubricants are acceptable:
  - a. API Service CD, CE, and CF-4 single viscosity oils.
  - b. API Service CD, CE, and CF-4 multi-viscosity oils.
3. Use the proper weight oil for your average operation temperature.

Air Temperature	Single Viscosity	Multi-Viscosity
Above 32° F (0° C)	SAE 30W	SAE 15-40W
-10° to 32° F (-23° to 0° C)	SAE 10W	SAE 10-30W

Figure 5: Lube Oils

4. Never put additives or flushing oil in crankcase.

### SP1. CHECKING OIL LEVEL

1. While the engine is stopped, check the oil level in the crankcase with the dipstick daily. The oil level must be between the high and low marks on the stick. Fill with the recommended oil, and fill only to the high mark on the dipstick. Follow the lubrication recommendations in Figure 5.

### SP2. OIL CHANGES

1. The set is delivered with special break-in oil. Change the engine oil and oil filter after 50 hours of operation. Use Service CC30 weight oil during the first 100 hours.
2. Change the oil and filter again at 100 hours using the oil recommended in the above diagram. After this, change oil and filter every 250 hours.
3. During intermittent cold weather operation, change oil every 100 hours or six weeks, whichever comes first.
4. Change oil at any seasonal change in temperature when a new viscosity of oil is required.
5. Change oil when engine is warm but not hot.
6. Dispose of waste oil in an approved manner.
7. Never use a flushing oil.
8. Loosen clamp on oil change tube. Remove cap. Drain oil. Replace cap and tube.
9. Refill engine with recommended oil.
10. Engine capacity with new oil filter is:  
Model 944W3.....10.5 qts. (10 liters)

---

## Servicing

---

### SP3. CHANGING LUBE OIL FILTER

1. Change the lube oil filter every 250 hours.
2. Use a filter wrench to remove old filter. Dispose of filter in approved manner.
3. Make sure the gasket from the old filter is removed and discarded. Clean mount face.
4. Spread a thin film of engine oil on the rubber gasket on the new filter and screw it on nipple until gasket meets the sealing surface.
5. Using hands only – no wrench – tighten filter one-half turn farther. Overtightening can do damage to filter housing.
6. Fill engine with recommended oil. Start engine and check for leakage. Stop engine, wait 3 minutes, and check oil level. Add additional oil if necessary.
7. Oil filter part number is:  
**Model 944W3.....#24-01201**

### SP4. AIR CLEANER

1. Visually inspect air cleaner every 250 hours. In dusty conditions, check more often.
2. Remove the plate on the bottom of the air intake manifold. Remove and inspect the foam element. If dirty, wash element in soapy water. Rinse and dry thoroughly before reinstalling.

**Note:** Make absolutely sure no impurities enter the engine while changing the element, and do not run the engine with the air cleaner removed.

**Do not clean the filter with diesel fuel, solvent, or gasoline. Serious engine damage can result.**


### SP5. V-BELTS

1. Check the tension and wear on the V-belt after every 50 hours.
2. Use your thumb to press on the belt at the midpoint between the crankshaft and alternator pulleys. The tension is correct if the belt can be depressed about .39 to .47 in. (10 - 12 mm) with 22 lbs. (10 kg) force.

## Servicing


### SP7. VALVE CLEARANCES

1. Readjust valve clearance after first 50 hours of operation. Check valves every 500 hours thereafter.
2. Check the valves when the engine is cold.
3. Rotate the crankshaft in a clockwise direction in the front 180° to bring each piston to the top dead center on the compression stroke. Top dead center (TDC) is when notch on the pulley aligns with the pointer and the two valves on cylinder No. 1 "rock". Rocking is when the rocker arms (for the two valves on a given cylinder) are moving in opposite directions, one up closing the valve and one down opening the other valve. The moment when the two rocker arms are exactly aligned with each other is when they "rock".

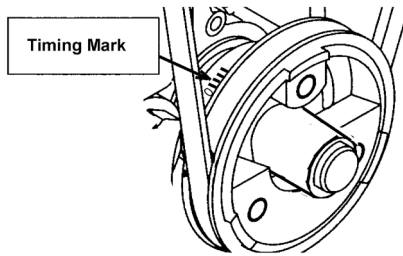

**Figure 6:** Timing Mark

4. Measure the valve clearance for each of the valves, with a feeler gauge, in the firing order (1-3-4-2). Standard valve clearances for a cold engine are:  
Intake (IN).....0.0098 in. (0.25 mm)  
Exhaust (EX).....0.0098 in. (0.25 mm)
5. To adjust valve clearance, loosen the lock nut on the adjustment screw. Insert a feeler gauge between the rocker arm and the valve stem cap. Adjust, while measuring the clearance, until the feeler gauge slides with a slight drag. Tighten the lock nut and recheck the clearance (Figure 7).

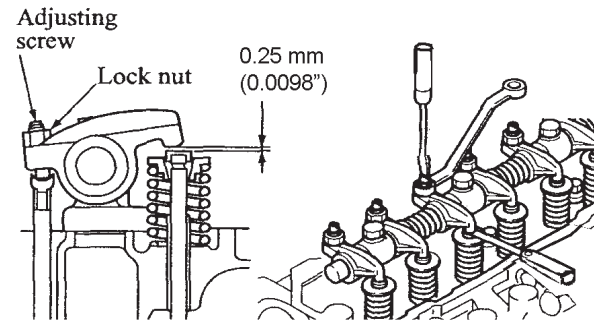

**Figure 7:** Valve Adjustment

6. Adjust the remaining valves.
7. Replace the rocker arm cover.

---

## Servicing

---

### FUELS - GENERAL

1. Use only clean, high quality fuels of the following specifications, as defined by ASTM designation D975 for diesel fuels:
  - a. Use grade No. 2 diesel at ambient temperatures above freezing 32° F (0° C).
  - b. Use grade No. 1 at ambient temperatures below freezing.
  - c. International fuel specifications:  
JIS K2204  
ISO-8217-DMA  
BS 2869 Part 1 Class A1  
BS 2869 Part 2 Class A2
2. Use fuel having less than .2% sulphur of weight (less than 0.05% recommended).
3. The cetane number should be 45 or higher.
4. Particulate contaminate should be 5.0 mg/l (0.00018 oz/U.S. gal) or lower.
5. DO NOT use these unsuitable grades of fuel:
  - a. Domestic heating oils, all types.
  - b. Class B engine.
  - c. Class D domestic fuels.
  - d. Class E, F, G or H industrial or marine fuels.
  - e. ASTM-D975-60T No. 4-D and higher number fuels.
6. Storing fuel:
  - a. Keep dirt, scale, water, and other foreign matter out of fuel.
  - b. Avoid storing fuel for long periods of time.
  - c. Fill the fuel tank at the end of each day's operation. This will reduce condensation.

### SP8-10. FUEL FILTER

1. Your generator set should have a fuel filter installed. We recommend the Northern Lights brand of fuel filters.
  - a. Check the primary fuel filter daily as recommended by the filter manufacturer.
  - b. Change the filter as often as necessary or every 250 hours.
  - c. Remove the fuel filter with a filter wrench.
  - d. Apply a coating of fuel to the o-ring of the new fuel filter.
  - e. Tighten the new filter by hand, do not use a filter wrench for tightening.
  - f. The filter should be dry.
  - g. Do not add fuel to the fuel filter before installation, as this could cause unfiltered fuel to enter the fuel pump.
  - h. Bleed the air out of the filter.

The fuel filter part number is:

**944W3.....24-51201**

## Serviceing

### SP11. BLEEDING THE FUEL SYSTEM



**CAUTION:** Escaping diesel fuel under pressure can penetrate skin causing serious personal injury. Before disconnecting lines be sure to relieve all pressure. Before applying pressure, be sure all connections are tight and lines, pipes and hoses aren't damaged. Fuel escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood, rather than hands, to search for suspected leaks. If injured by escaping fuel, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.

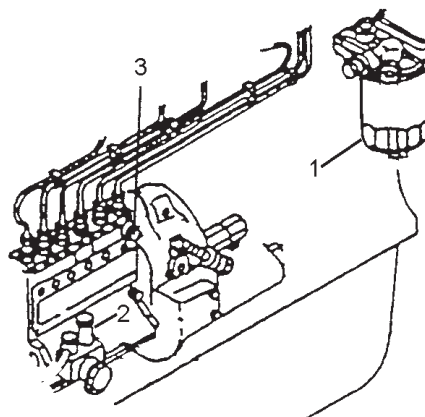


Figure 8 Fuel Feed Pump

1. Fuel system air bleeding may be needed when:
  - a. After fuel has been added to a newly installed engine.
  - b. A new fuel filter is installed.
  - c. The engine has run out of fuel.
  - d. The fuel lines, injection pump, or any other fuel system component has been removed and installed.
2. After changing the fuel filter, air only needs to be bled from the fuel filter. To do this:
  - a. Loosen the air vent plug (#1 on Figure 8) on the fuel filter by about 1-1/2 turns. (Be sure to cover the vent with a cloth to prevent fuel from splashing.)
  - b. Turn the priming pump cap on the fuel feed pump counterclockwise to unlatch it. Move the priming pump plunger (#2 on Figure 8) up and down. To close the pump turn the cap clockwise while depressing it.
  - c. Close the air vent plug when no more air bubbles can be seen in the fuel flowing from the air vent plug hole.
3. To bleed air at the fuel injection pump:
  - a. Turn the air vent plug (#3 on Figure 8) about 1-1/2 turns to loosen it. (Cover the vent with a cloth to prevent fuel from splashing.)
  - b. Pump the feed pump cap up and down.
  - c. When there are no air bubbles to be seen in the fuel flowing from the air vent plug hole, push down the priming pump cap and turn it clockwise to lock it in place.

**NOTE:**

**Do not close the air vent plug before locking the priming pump cap in place, because the internal pressure in the pump will prevent the priming pump cap from returning to the original position.**

4. If the engine does not start after this bleeding process, loosen a fuel line at the injector while cranking the engine with the starter motor until pure fuel escapes. Then tighten the connections. Do each line one-at-a-time. After the engine has started, use a piece of cardboard to look for fuel leaks.



## Servicing

### SP12. INJECTOR SERVICE

1. Injectors should be checked every 500 hours. This check should be made by a Northern Lights dealer or local injection repair station. Expected service life of the engine's injectors is 5,000 hours.



**CAUTION:** *Escaping diesel fuel under pressure can have sufficient force to penetrate the skin causing serious personal injury. If injured by escaping fuel, see a doctor at once.*

2. Injector removal:
  - a. Clean loose dirt from around the injectors and the fuel lines.
  - b. Relieve high pressure in the fuel lines by loosening the delivery line flare nuts at each injector.
  - c. Remove delivery lines by disconnecting them from the injectors and injection pump. Remove all lines as an assembly; do not remove the spacers. Cover the ends of the lines, the injector inlets, and the injection pump outlets to keep dirt out.
  - d. Remove the return line retaining bolts, washers, and return line.
  - e. Loosen the injector retaining nuts at the same time a little at a time. Remove the injector.
  - f. Remove the injector seat. Cover the holes to prevent debris from entering the cylinders.

**Note:** Do not use pry bars to remove injectors from the cylinder head.

3. Injector repair and cleaning:
  - a. Take injectors to your Northern Lights dealer or local injection repair station for testing and service.
4. Injector installation:
  - a. Install new injector seal washer seat and injector. Evenly tighten the injector retaining nuts to 39.1 to 47.7 ft/lbs (53.0 to 64.7 N•m), or 5.4 to 6.6 kgf•m. Do not overtighten.
  - b. Reinstall the return line using new sealing washers. Tighten bolts to 13.0 to 15.9 ft/lbs (17.7 to 21.6 N•m), or 1.8 to 2.2 kgf•m.

**NOTE:** Overtightening can damage injectors.

- c. Reinstall injection lines. Tighten flare nuts at injection pump to 19.5 to 23.9 ft/lbs (26.5 to 32.4 N•m), or 2.7 to 3.3 kgf•m. Leave the lines loose at injectors for bleeding.
- d. Bleed the injection lines. Crank the engine to fill the lines. Tighten flare nuts at injectors to 15.2 to 18.1 ft/lbs (20.6 to 24.5 N•m), 2.1 to 2.5 kgf•m.
- e. Start the engine and check for leaks using a piece of paper or cardboard. Do not use your hand to check for leaks.

## Servicing

### SP13. INJECTION PUMP

1. Since operating conditions may vary considerably, it is difficult to give a definite interval for checking the injection pump. But as a rule, pump settings, maximum speed, idle speed and exhaust smoke should be checked after every 2000 hours of operation. Service of the fuel injection pump should only be done if checks indicate pump malfunction.
2. Black smoke can be an indication of pump malfunction. Before servicing the pump, check other possible causes:
  - a. Check cleanliness of the air filter.
  - b. Check valve clearances.
  - c. Clean and check injectors.
3. Any repair which involves disassembly of the injection pump must be carried out by specially trained mechanics with the proper tools and test equipment.

**NOTE: All warranties on the engine become null and void if the injection pump seals are broken by unauthorized persons.**

#### 4. Injection Pump Removal:



**CAUTION:** Escaping diesel fuel under pressure can have sufficient force to penetrate the skin, causing serious personal injury. If injured by escaping diesel fuel, see a doctor at once.

- a. Clean the injection pump, hoses, and area around the pump with a cleaning solvent or steam cleaner.

**NOTE: Never steam clean or pour cold water on an injection pump while the engine is running or the pump is warm.**

- b. Remove the injection lines from the pump and injectors. Remove all lines as an assembly. Do not remove the spacers. Cover the ends of the lines, the injector inlets, and the injection pump outlets to keep dirt out of the injectors, lines, and pump.
- c. Align timing marks on timing gears.
- d. Remove the pump support bracket on rear of pump.
- e. Remove the 4 mounting nuts.

- f. Take the pump to your Northern Lights dealer or an injection repair station for testing and service.

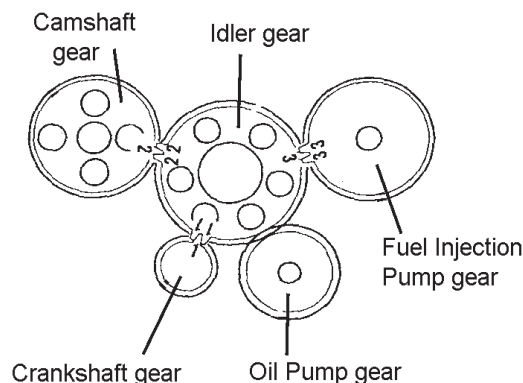


Figure 9: Timing Marks

#### 5. Injection Pump Installation:

- a. Install the fuel injection pump after having aligned its gear alignment mark with that of the idler gear alignment mark as shown in Figure 9 above. When the alignment marks of the timing gears align as in the diagram to the right, the No. 1 piston is top dead center in the compression stroke.
- b. Install the injection pump to the side of the engine first then put in the end bolts, and then the tube with its bolts, and then the side bracket.
- c. Torque mounting bolts to 13.0 - 18.1 ft/lbs (17.7 to 24.5 N•m), 1.8 to 2.5 kgf•m.

## Servicing

### COOLING SYSTEM - GENERAL

**NOTE:** Be sure to close the sea-cock before working on the engine cooling system.



**CAUTION:** The cooling water in the engine reaches extremely high temperatures. You must use extreme caution when working on hot engines to avoid burns. Allow the engine to cool before working on the cooling system. Open the filler cap carefully, using protective clothing when the engine is warm.

### WATER QUALITY

1. Distilled, deionized, soft water is preferred for use in cooling systems. Bottled distilled water from a food store or water supplier is recommended. Tap water often has a high mineral content. Tap water should NEVER be put in a cooling system unless first tested by a water quality laboratory. Do not use water made by the reverse osmosis method unless it has been PH neutralized.
2. Here are acceptable water quality specifications:

Contaminates	Parts per Million	Grains per Gallon
Maximum Chlorides	40	2.5
Maximum Sulfates	100	5.9
Maximum Dissolved Solids	340	20.0
Maximum Total Hardness	170	10.0
PH Level 5.5 to 9.0		

3. If chlorides, sulfates or total dissolved solids are higher than the above given specification, the water must be distilled, demineralized, or deionized before it is used in a cooling system.
4. If total hardness is higher than 170 ppm and all other parameters are within the given specifications, the water must be softened before it is used to make coolant solution.

### SP14. CHECK THE COOLANT LEVEL

1. Check the coolant level each day before starting the engine.
  - a. Check the water level by removing the pressure cap from the expansion tank. In order to give the cooling water an opportunity to expand, the level should be about 1 in. (2.5 cm) below the filler cap sealing surface when the engine is cold.
  - b. Soft water with about a pH about 6.5 to 8.5 combined with an antifreeze in a 30% to 50% (maximum) solution should be used.
  - c. The antifreeze should not contain amine, silicate, or borate.

### SP15. COOLING SYSTEM FLUSHING

1. Flush the cooling system every 2000 hours or every 12 months, whichever comes first.
2. Remove fill cap and open drains on engine block. The engine block drain is on the service side of the engine above the dipstick, next to the flywheel housing.
3. Pour clean water into the engine until water coming from engine is clear of discoloration. Close drains and refill the engine with recommended coolant mixture.
4. Use 50% water / 50% (maximum) ethylene glycol antifreeze mix. Antifreeze mixture is recommended as a good year-round coolant.
5. Coolant capacity is approximately 3 gal. (11.4 liters).
6. Check hoses and connections and repair any leakage.
7. Start the engine and check for leaks. Run the engine for five minutes, then shut it down. Let engine cool, and then check the coolant level in the engine. Add coolant as needed.

**NOTE:** Be sure to open the sea-cock after working on the engine cooling system and starting the engine.

---

## Servicing

---

### SP16. HEAT EXCHANGER

1. Clean the heat exchanger core once a year or after 2000 hours of operation.
2. Drain the expansion tank and heat exchanger.
3. Remove the heat exchanger end covers.
4. Clean the inside of the exchanger core tubes using a metal rod. Flush, inspect, and clean again if necessary.
5. Reassemble the heat exchanger. Fill the cooling system. Start the engine and check for leaks.

### SP17. RAW WATER PUMP

1. Change the raw water pump impeller every 500 hours, or as needed.
2. Remove the pump cover. Pry out the impeller using needle-nose pliers or two screwdrivers. Be sure to remove all pieces of the failed impeller.

**NOTE: Place some kind of protection under the screwdrivers in order to not damage the pump housing.**

3. Clean the inside of the housing.
4. Press in the new impeller and place the sealing plug in the outer end of the impeller center if this has not already been done.

**NOTE: Make sure that there is always an extra impeller and cover gasket in reserve on board.**

### SP18. ZINC ELECTRODES

1. A zinc electrode is installed in the heat exchanger cooling system to protect the engine from electrolysis. Check it faithfully every 250 hours. If you are in warm saltwater, or where electrolysis is a known problem, check it more often.
2. Remove the zinc holder from the bottom of the exchanger. This will drain raw water from the exchanger.
3. Scrape or steel brush the zinc electrode clean. If more than 50% of the electrode is corroded away, replace it with a new zinc. The electrode screws out of the holder.
4. Reinstall the zinc holders. Be sure the threads are clean for good metal-to-metal contact. Do not use thread sealant.
5. Refill the cooling system. Start the engine and check for leaks.

## Servicing

### GENERATOR END

The maintenance and operation recommendations for the generator end are in a separate Owner's Manual. If you do not have one of these manuals, contact your local dealer.

### ELECTRICAL SYSTEM - GENERAL



**CAUTION:** Excessive non-linear loads can lead to regulator and/or generator end failures and should be no greater than 20% of overall load. Failures caused by excessive non-linear loads are not warrantable.


1. Never switch the battery switch off or break the circuit between the alternator and the batteries while the engine is running. Alternator damage can result.
2. Do not reverse the polarity of the battery cables when installing the battery.

### BOOSTER BATTERIES



**CAUTION:** Battery gas can explode. Keep all flames and sparks away from batteries.

1. Before changing or using booster batteries, check the battery electrolyte level. Add distilled water if necessary.
2. Booster and main batteries must have the same voltage rating.
3. First, connect the positive (+) terminal of the booster battery to the positive (+) terminal of the main battery. Then, connect the negative (–) terminal of the booster battery to ground on the engine block (Figure 10).
4. Remove the booster battery after starting the engine.
5. Sealed Batteries:  
See the manufacturer's charging and booster instructions.

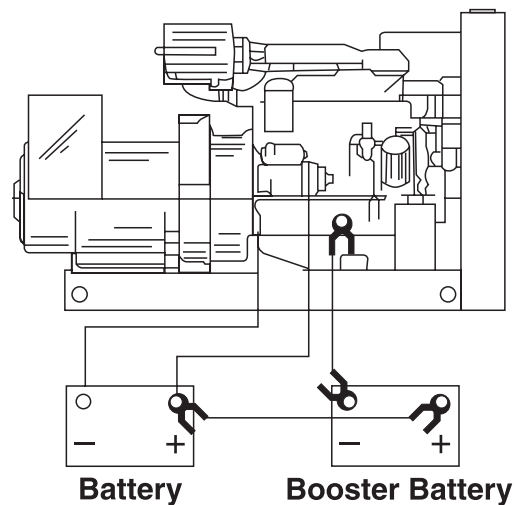

**Figure 10:** Booster Battery Connections

---

## Servicing

---

### SP19-20. BATTERY CARE

1. Check the electrolyte level every 50 hours, or once a month. Add distilled water to the manufacturer's recommended level.
2. Batteries, cables, and cable terminals should be checked and cleaned every 100 hours. Clean corrosion with a water and baking soda solution. Flush with clean water. Tighten terminals and grease them to inhibit future corrosion.
3. Check the battery condition with a hydrometer every 500 hours.
6. Cover the terminals and openings of the starter and alternator with adhesive fabric tape. Cover the starter and alternator with polyethylene sheets and put desiccant inside covering.
7. Disconnect and clean the battery. Remove the battery to a cool dry storage place, if possible.
8. Clean the outside of the unit. Paint any scratched or chipped surfaces. Put corrosion preventative on all exposed metal surfaces.
9. Cover the engine.

### SP23. WINTERIZING / OUT-OF-SERVICE

**NOTE: Remember to close the sea-cock before opening drain cocks.**

For engines not going to be used for more than 3 months:

1. Change the crankcase oil and filter. Fill with rust preventative oil, and make a mixture of rust preventative oil and fuel 1:1 and fill the fuel tank with the mixture. Start the engine and operate it with no load for 5 to 10 minutes. Stop the engine, spray rust preventative agent into intake pipe. Drain the rust preventative oil and fuel.
2. Drain fresh water and seawater cooling systems completely. Flush fresh water systems and refill with the proper antifreeze mixture.
3. Drain the water supply lines and wet exhaust line. Cover the intake and exhaust ports with adhesive fabric tape.
4. Loosen the seawater pump cover and drain the pump.
5. Loosen the alternator belt.



## Troubleshooting

### DC ELECTRICAL SYSTEM

PROBLEM	POSSIBLE CAUSE	RECOMMENDATION(S)
<b>Battery Will Not Charge</b>	Loose or corroded connections	• Clean and tighten battery connections.
	Sulfated or worn out batteries	• Check specific gravity of each battery. • Check electrolyte level of each battery.
	Loose or defective alternator belt	• Adjust belt tension. • Replace belt.
<b>Starter Inoperative</b>	Check DC circuit breaker	• If the breaker is tripped, reset it.
	Loose or corroded connections	• Clean and tighten loose battery and harness plug connection.
	Low battery condition	• Check specific gravity of each battery. • Check electrolyte level of each battery.
	Defective electrical system ground wire:	• Repair or replace.
<b>Starter Cranks Slowly</b>	Low battery condition	• Battery is too small. • Battery cables are too small.
	Check specific gravity of each battery	• Replace battery if necessary.
	Check electrolyte level of each battery	• If low, fill cells with distilled water.
	Crankcase oil too heavy	• Fill with oil of appropriate viscosity.
	Loose or corroded connections	• Clean and tighten loose connections.
<b>Entire Electrical System Does Not Function</b>	Check DC circuit breaker	• If breaker is tripped, reset it.
	Faulty connection	• Clean and tighten battery and harness plug connections.
	Sulfated or worn out batteries	• Check specific gravity and electrolyte level of each battery.

If you cannot correct problems with these procedures, see your **Northern Lights** dealer.

## Troubleshooting

### ENGINE

PROBLEM	POSSIBLE CAUSE	RECOMMENDATION(S)
<b>Engine Hard to Start or Will Not Start</b>	Improper starting procedure	• See starting section of this manual. Take special note of Bypass Switch operation.
	No fuel	• Check level of fuel in fuel tank.
	Low battery condition	• Check electrolyte level and condition.
	Excessive resistance in starting circuit	• Clean and tighten all battery connections.
	Crankcase oil too heavy	• Use oil of proper viscosity.
	Improper type of fuel	• Consult fuel supplier and use proper type of fuel for operating condition.
	Water, dirt or air in fuel system	• Drain, flush, fill and bleed system.
	Clogged primary fuel filter element	• Clean or replace filter element.
	Clogged secondary fuel filter element	• Replace filter element.
<b>Engine Runs Irregularly or Stalls Frequently</b>	Dirty or faulty injection nozzles	• Have your dealer check injection nozzles.
	Below normal engine temperature	• Remove and check thermostat.
	Clogged primary fuel filter element	• Clean or replace filter element.
	Clogged secondary fuel filter element	• Replace secondary filter element.
	Water or dirt in the fuel system	• Drain, flush, fill and bleed system.
	Dirty or faulty injection nozzles	• Have your dealer check injection nozzles.
	Air in fuel system	• Inspect clamps and hoses on suction side of fuel pump for air leak.
<b>Lack of Engine Power</b>	Improper type of fuel	• Consult fuel supplier and use proper type of fuel for operating condition.
	Engine overloaded	• Reduce the load.
	Intake air restriction	• Service air cleaner.
	Clogged primary fuel filter element	• Clean or replace filter element.
	Clogged secondary fuel filter element	• Replace filter element.
	Improper type of fuel	• Consult fuel supplier and use proper type of fuel for operating conditions.
	Overheated engine	• See “Engine Overheats” in next category.
	Below normal engine temperature	• Remove and check thermostat.
	Improper valve clearance	• Reset valves. Best done by dealer.
	Dirty or faulty injection nozzles	• Replace injectors. Best done by dealer.

## Troubleshooting

### ENGINE

PROBLEM	POSSIBLE CAUSE	RECOMMENDATION(S)
<b>Lack of Engine Power</b> (continued)	Low compression pressure (worn piston rings, etc...)	<ul style="list-style-type: none"> <li>• Consult dealer.</li> </ul>
<b>Engine Overheats</b>	Engine overloaded  Low coolant level   Keel cooling tubes (marine sets) have been painted  Cooling system needs flushing  Defective thermostat  Defective temperature gauge  Water pump impeller worn or broken	<ul style="list-style-type: none"> <li>• Reduce the electrical load.</li> <li>• Fill tank or radiator to proper level.</li> <li>• Check hoses for loose connections and leaks.</li> <li>• Remove paint from tubes.</li> <li>• Flush cooling system.</li> <li>• Remove and check thermostat.</li> <li>• Check water temperature with thermometer and replace gauge if necessary.</li> <li>• Check the impeller and replace if necessary.</li> </ul>
<b>Engine Knocks</b>	Insufficient oil  Injection pump out of time  Below normal engine temperature   Faulty fuel injector  Engine overheating	<ul style="list-style-type: none"> <li>• Call your dealer.</li> <li>• Call your dealer.</li> <li>• Check your thermostats.</li> <li>• Check water temperature to see if temperature gauge is working properly.</li> <li>• Call your dealer.</li> <li>• See "Engine Overheating" section.</li> </ul>
<b>High Fuel Consumption</b>	Improper type of fuel  Clogged or dirty air cleaner  Engine overloaded  Improper valve clearance  Injection nozzles dirty  Injection pump out of time  Engine not at proper temperature	<ul style="list-style-type: none"> <li>• Use correct fuel for temperature.</li> <li>• Service air cleaner.</li> <li>• Reduce the electrical load.</li> <li>• See your dealer.</li> <li>• See your dealer.</li> <li>• See your dealer.</li> <li>• Check your thermostats.</li> <li>• Check water temperature with thermometer and replace gauge if necessary.</li> </ul>
<b>Below Normal Engine Temperature</b>	Thermostats not working properly  Temperature gauge not working properly	<ul style="list-style-type: none"> <li>• Check thermostats.</li> <li>• Check water temperature with thermometer.</li> </ul>
<b>Low Oil Pressure</b>	Low oil level  Improper type of oil  Partially plugged oil filter	<ul style="list-style-type: none"> <li>• Fill crankcase to proper level.</li> <li>• Drain and fill crankcase with correct oil.</li> <li>• Replace filter.</li> </ul>




If you cannot correct problems with these procedures, see your **Northern Lights** dealer.

## Troubleshooting

### ENGINE

PROBLEM	POSSIBLE CAUSE	RECOMMENDATION(S)
<b>High Oil Consumption</b>	Break-in period	• Oil consumption decreases after break in.
	Crankcase oil too light	• Use proper viscosity oil.
	Oil leaks	• Check for leaks in lines around gaskets and drain plug.
	Crankcase over full	• Remove excess oil.
<b>Engine Emits Black or Gray Exhaust Smoke</b>	Clogged or dirty air cleaner	• Service air cleaner.
	Defective muffler (back pressure too high)	• Have dealer check back pressure.
	Improper fuel	• Use correct fuel for temperature.
	Fuel pump faulty	• See your dealer.
	Injection nozzles dirty	• See your dealer.
	Engine overloaded	• Reduce the electrical load.
	Injection nozzles dirty	• See your dealer.
	Injection pump faulty	• Consult your dealer.
	Engine out of time	• See your dealer.
	Incorrect valve clearance	• Consult your dealer.
<b>Engine Emits White Smoke</b>	Improper fuel	• Use correct fuel for temperature.
	Cold engine	• Warm up engine to normal operating temperature.
	Defective thermostat	• Remove and check thermostat.
	Engine out of time	• See your dealer.
	Low Compression Pressure	• See your dealer.
	Low engine oil viscosity	• Use proper viscosity of oil to ambient temperature.
	Excessive amount of engine oil	• Maintain correct oil level.
	Fuel injection nozzles faulty (uneven injection)	• See your dealer.

AC Wiring Diagram

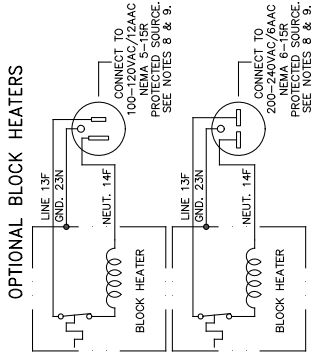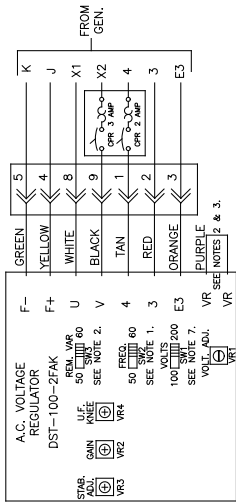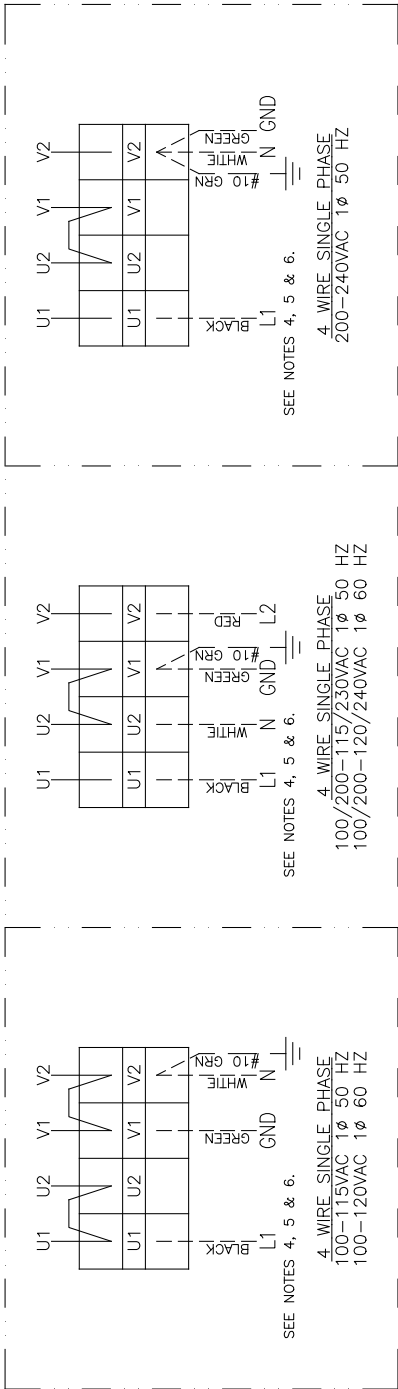

HEATER SPEC	VOLTAGE	500W CURRENT	750W CURRENT	1000W CURRENT	1500W CURRENT
120 VAC	100-120 VAC	5 A	7 A	10 A	13 A
240 VAC	200-240 VAC	3 A	4 A	5 A	7 A


SYMBOL	DATE	DESCRIPTION	REVISIONS
J	12/20/2019	UPDATE BLOCK HEATER OPTIONS AND NOTES	TH
H	1/19/2019	ADDED REV. LOG.	TJ
G	5/14/2018	CHANGED REV FROM E TO G	TJ
F	5/7/2018	ADDED 500W BLOCK HEATER & HEATER TABLE	TH
E	9/10/2016	ADD 240VAC OPTION TO # 50 Hz	TH
D	5/6/13	ADD OPTIONAL BLOCK HEATERS	TH
C	11/29/10	REMOVE 200-240 VAC 60 Hz CONFIGURATIONS	TH
B	10/25/10	ADD PROPERITY NOTE	TH
A	1/17/10	MOVE JUMPER FROM USER TO GENERATOR CONNECTED SIDE OF TERMINAL BLOCK	TH

- NOTES:
1. SET SW2 FOR CURRENT APPLICATION. (50 OR 60 HZ.)
  2. SET SW3 PER APPLICATION IF REMOTE VOLTAGE ADJUST RHEOSTAT IS USED.
  3. FOR REMOTE VOLTAGE ADJUST RHEOSTAT CUT JUMPER AND SPLICE INTO PURPLE LEADS.
  4. IF REQUIRED, REMOVE AFFECTED LARGER GAUGE CONDUCTORS. MAKE CONNECTIONS USING BOLT, LOCK WASHER AND NUT. ISOLATE BY WRAPPING WITH ELECTRICAL TAPE.
  5. MARINE GENSETS ARE GROUNDED BY CUSTOMER, AT CUSTOMER'S DISCRETION. INDUSTRIAL GENSETS ARE TO BE GROUNDED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
  6. HIDDEN (DASHED) LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS. SIZING TO BE DETERMINED PER INSTALLATION.
  7. AVR INPUT SENSING SWITCH SW1 IS TO BE SET TO THE 200V POSITION FOR ALL VOLTAGES EXCEPT 100-120VAC APPLICATIONS.
  8. DO NOT ENERGIZE HEATER WHEN UNIT IS IN OPERATION.
  9. REMOVE THREE-POLE PLUG AND WIRE BLOCK HEATER LEADS TO TERMINALS NUMBERED AS INDICATED FOR MARINE DUTY UNITS ONLY.

AC Wiring Diagram  
M944W3, M944W3G and M30CW3  
4-wire w/ DST-100-2FAK Voltage Reg.  
B-9724J


AC Wiring Diagram

GENERATOR JUNCTION BOX

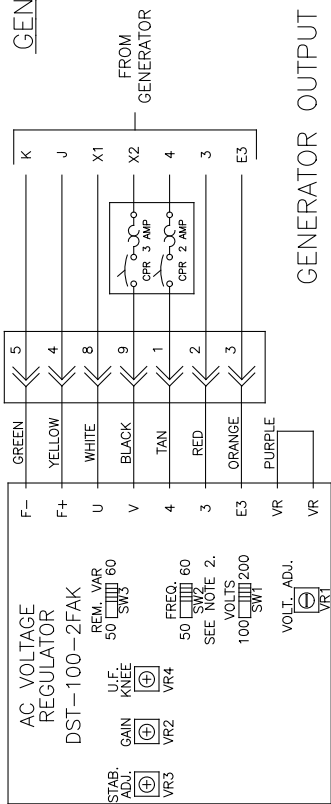

GENERATOR OUTPUT LEADS

U1 U2 V1 V2

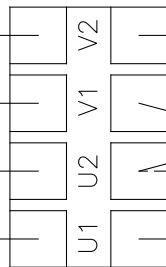


OUTPUT TERMINAL BOARD

100/200VAC 1 Ø 60 HZ.  
110/220VAC 1 Ø 60 HZ.  
120/240VAC 1 Ø 60 HZ.  
110/220VAC 1 Ø 50 HZ.  
115/230VAC 1 Ø 50 HZ.

- NOTES:
1. HIDDEN (DOTTED) LINES REPRESENT CUSTOMER CONNECTIONS.
  2. WIRE SIZING TO BE DETERMINED PER INSTALLATION.
  3. SELECT FREQUENCY SETTING PER APPLICATION.
  4. IF LOWER VOLTAGE (100-120VAC) IS NOT REQUIRED, THE OUTPUT CONDUCTOR CONNECTED TO TERMINAL U2 IS DELETED AND THE L2 (RED) CONDUCTOR BECOMES NEUTRAL (WHITE).
  5. GENSETS ARE TO BE GROUNDED BY CUSTOMER, AT CUSTOMER'S DISCRETION.

UNIT MOUNTED  
AC CIRCUIT  
BREAKER

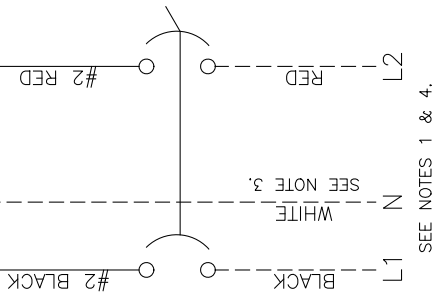


REV	DATE	DESCRIPTION	BY	CHK
C	12/2/18	ADD PROPRIETARY NOTE	EA	
D	12/2/18	EDIT NOTE 3	EA	
E	5/9/17	ADD M944 TO REVISIONS, DELETE NOTE 4.	EA	
F	3/7/16	ADD M944 TO REVISIONS	EA	
G	12/2/14	DELETE M944 FROM REVISIONS	EA	
SYMBOL				

REVISIONS

AC Wiring Diagram  
M944W3, M944W3G and M30C3F  
4-wire w/circuit breaker  
B-8459E



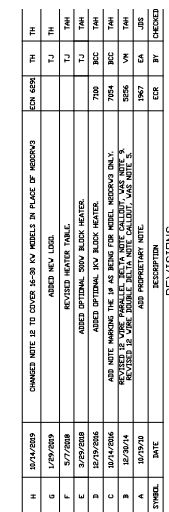

**AC Wiring Diagram**  
M944W3, M944W3G and M30CW3  
12-wire  
B-9723H


1. ALL NLI INSTALLED CONDUCTORS ARE TO BE TYPE MTW, 105°C, STRANDED, 600WAC.
2. SET SW2 FOR CURRENT APPLICATION, (50 OR 60 HZ).
3. SET SW3 FOR CURRENT APPLICATION, (30 OR 60 HZ).
4. FOR REMOTE VOLTAGE ADJUST REHOAT VOLTAGE ADJUST REHOAT IS USED.
5. FOR REMOTE VOLTAGE ADJUST REHOAT VOLTAGE ADJUST JUMPER AND SPICE INTO PURPLE LEADS.
6. DELETE NEUTRAL CONDUCTOR (AND JUMPER IF PRESENT), IF LOWER VOLTAGE IS NOT REQUIRED.
7. MARKING GENSETS ARE GROUND BY CUSTOMER. A CUSTOMER'S DISCRETION. INDUSTRIAL GENSETS ARE TO BE MARKED WITH A YELLOW TAPE OR MARKING.
8. THICK HIDDEN (DASHED) LINES INDICATE CUSTOMER SUPPLIED AND CONNECTED MAIN OUTPUT CONDUCTORS.
9. SIZING TO BE DETERMINED PER INSTALLATION.
10. NEUTRAL CONDUCTOR SIZED FOR 30KW UNITS AT THE LOWEST LISTED VOLTAGE. CONSULT N.L.I. ENGINEERING FOR CONDUCTOR SIZING AT OTHER GENSET VOLTAGE/KW RATINGS.
11. THE DOUBLE CIRCLE CONFIGURATION REQUIRES THE AIR TO BE REMOVED AS FOLLOWS: DISCONNECT LEADS 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768,



NOTES:


1. REMOVE ALL WIRE HARNESS CONNECTIONS TO THE ENGINE WIRE HARNESS, EXCEPT THE ENGINE WIRE HARNESS, 60WAC, 105TC, MULTISTRAND, UNLESS PAIRS AND AS NOTED.
2. REMOVE SHUTDOWN WIRE (SSR) AND DISCONNECT DODE CONNECTION AS SHOWN WHEN USING WITH ELECTRONIC CONTROL PANELS AND UNLESS COLOR CODED, ALL NLI INSTALLED CONDUCTORS ARE TO BE REMOVED AND MUST BE IDENTIFIED BY WIRE MARKER AT EACH CONNECTION POINT.
3. REMOVE SHUTDOWN WIRE (SSR) AND DISCONNECT DODE CONNECTION AS SHOWN WHEN USING WITH ELECTRONIC CONTROL PANELS AND UNLESS COLOR CODED, ALL NLI INSTALLED CONDUCTORS ARE TO BE REMOVED AND MUST BE IDENTIFIED BY WIRE MARKER AT EACH CONNECTION POINT.
4. 50 HZ OVERSPEED SWITCH TRIP .....1695 RPM (3192 HZ)  
50 HZ OVERSPEED SWITCH TRIP .....2034 RPM (3831 HZ)  
FOR DIP SWITCHES, LEAVE SWITCH 3 & 4 ON REST OF THE SWITCHES
5. REMAIN OFF. SHIELDS ARE TO BE ENGINE BLOCK GROUNDED AT ONE END ONLY. GROUND AT POINT INDICATED.
6. IF TWO GAUGED CONTROL PANELS ARE USED, DUAL STATION SENSERS MUST BE INSTALLED.
7. CONNECT 60A GREY TO CLUTCH TO TERMINAL STRIP IN -BOX.
8. CONNECT 60A GREY TO 102 RED WIRE FOR REVERSE POLARITY AUTOSTART PANEL CONNECTION.

## DC Wiring Diagrams

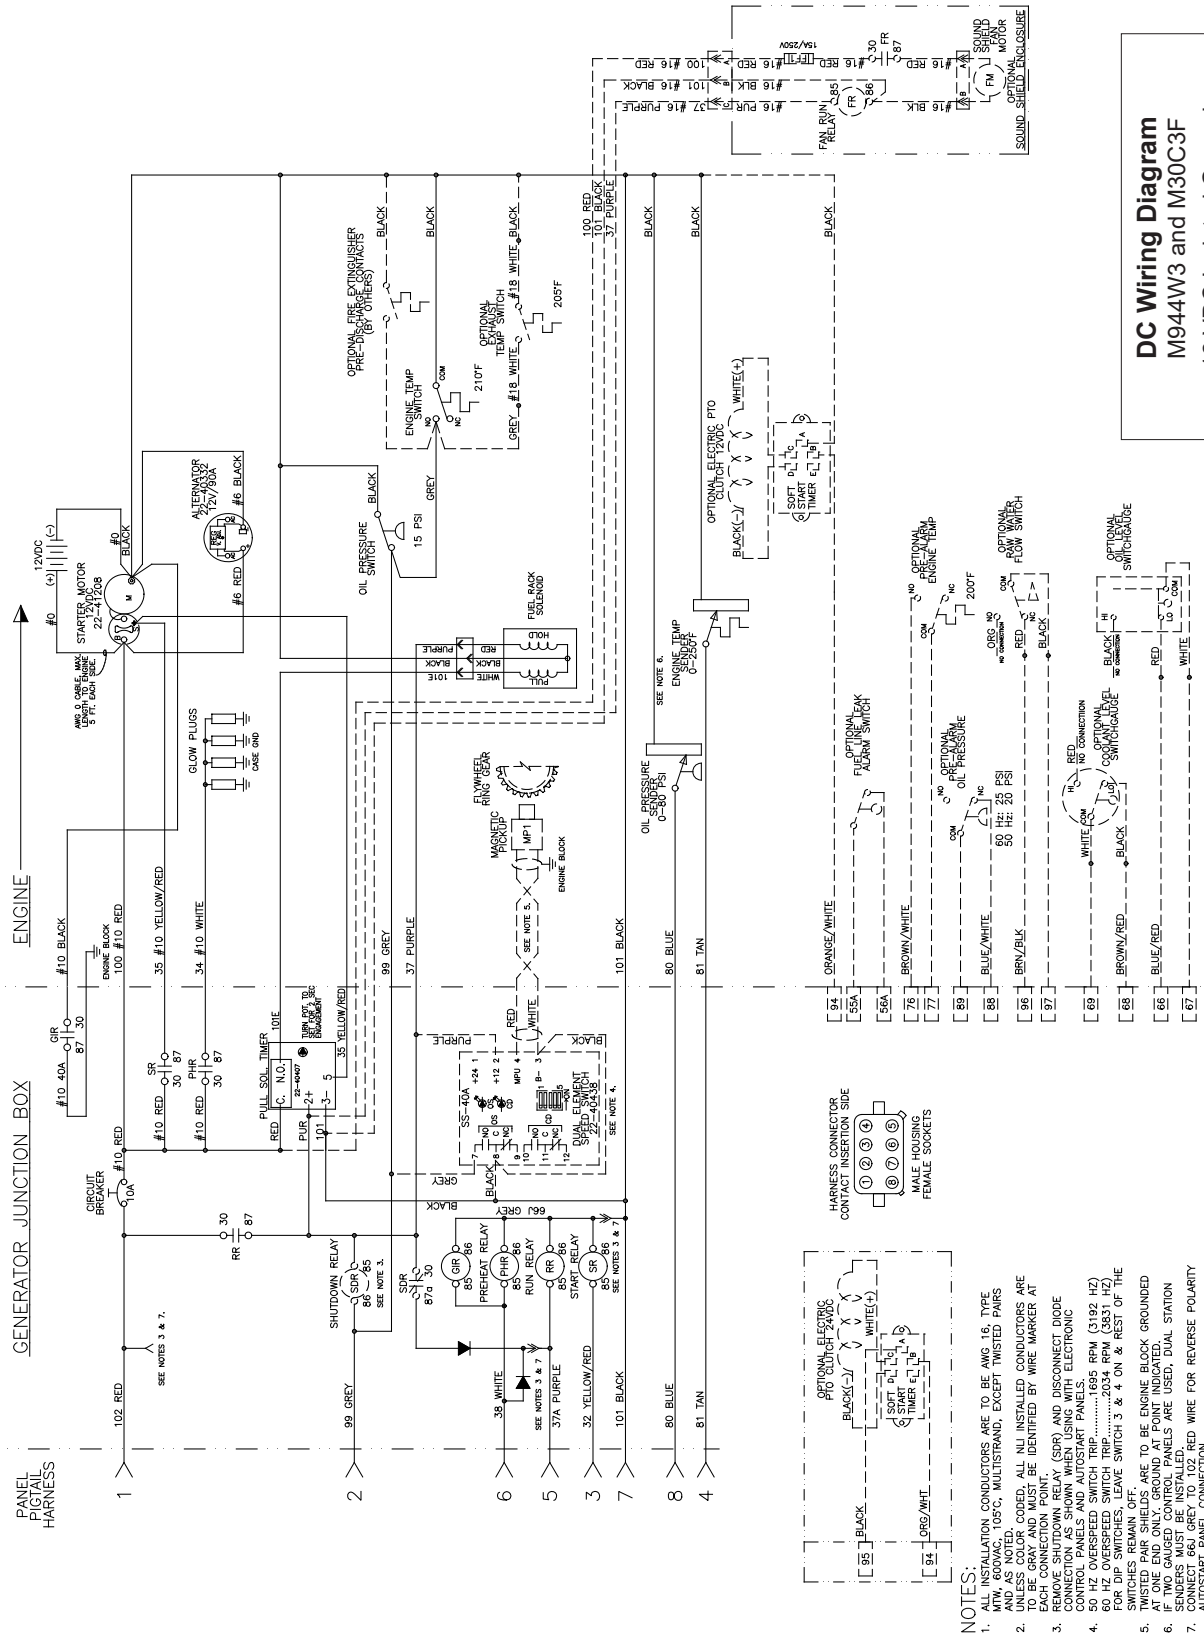


**DC Wiring Diagram**  
M944W3 and M30C3F  
12 VDC Isolated Ground  
C-7264C

## DC Wiring Diagrams

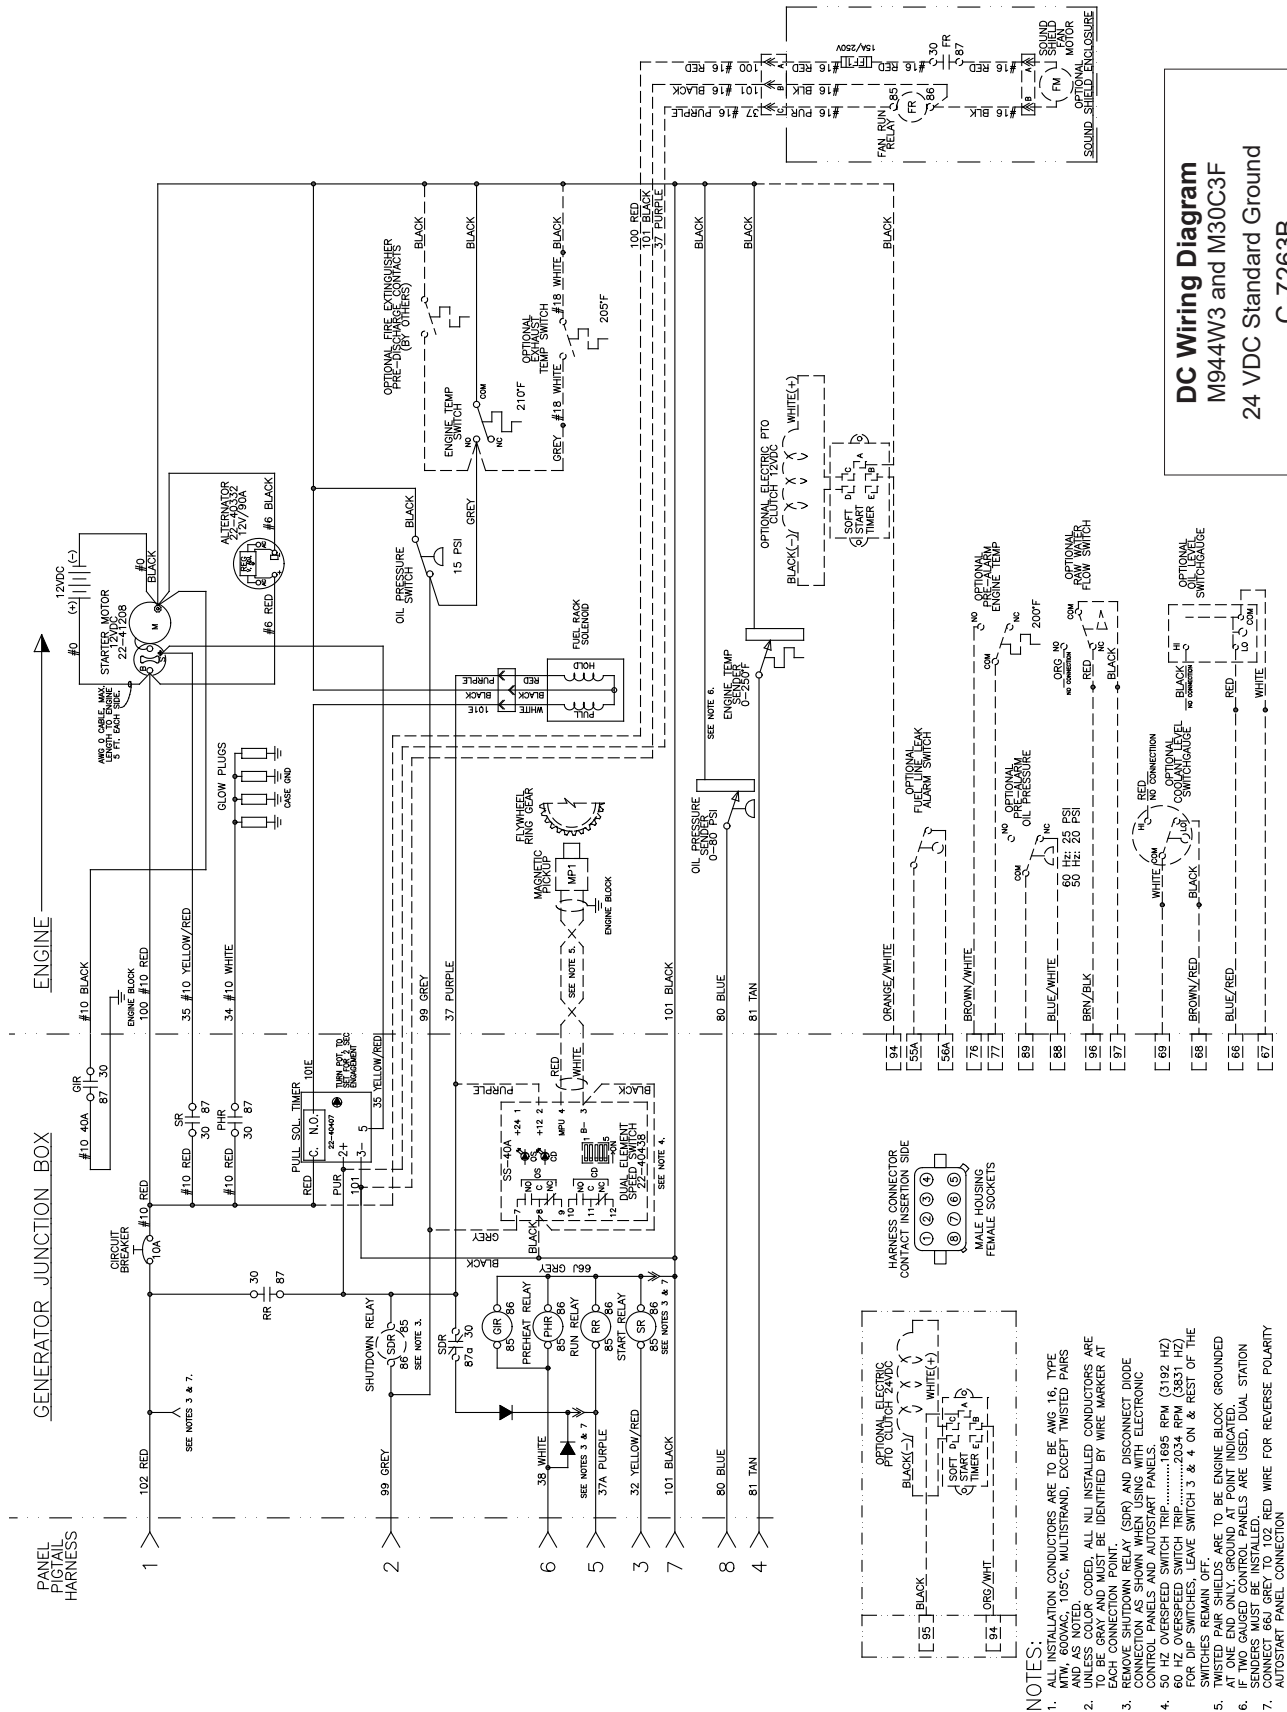

# DC Wiring Diagram

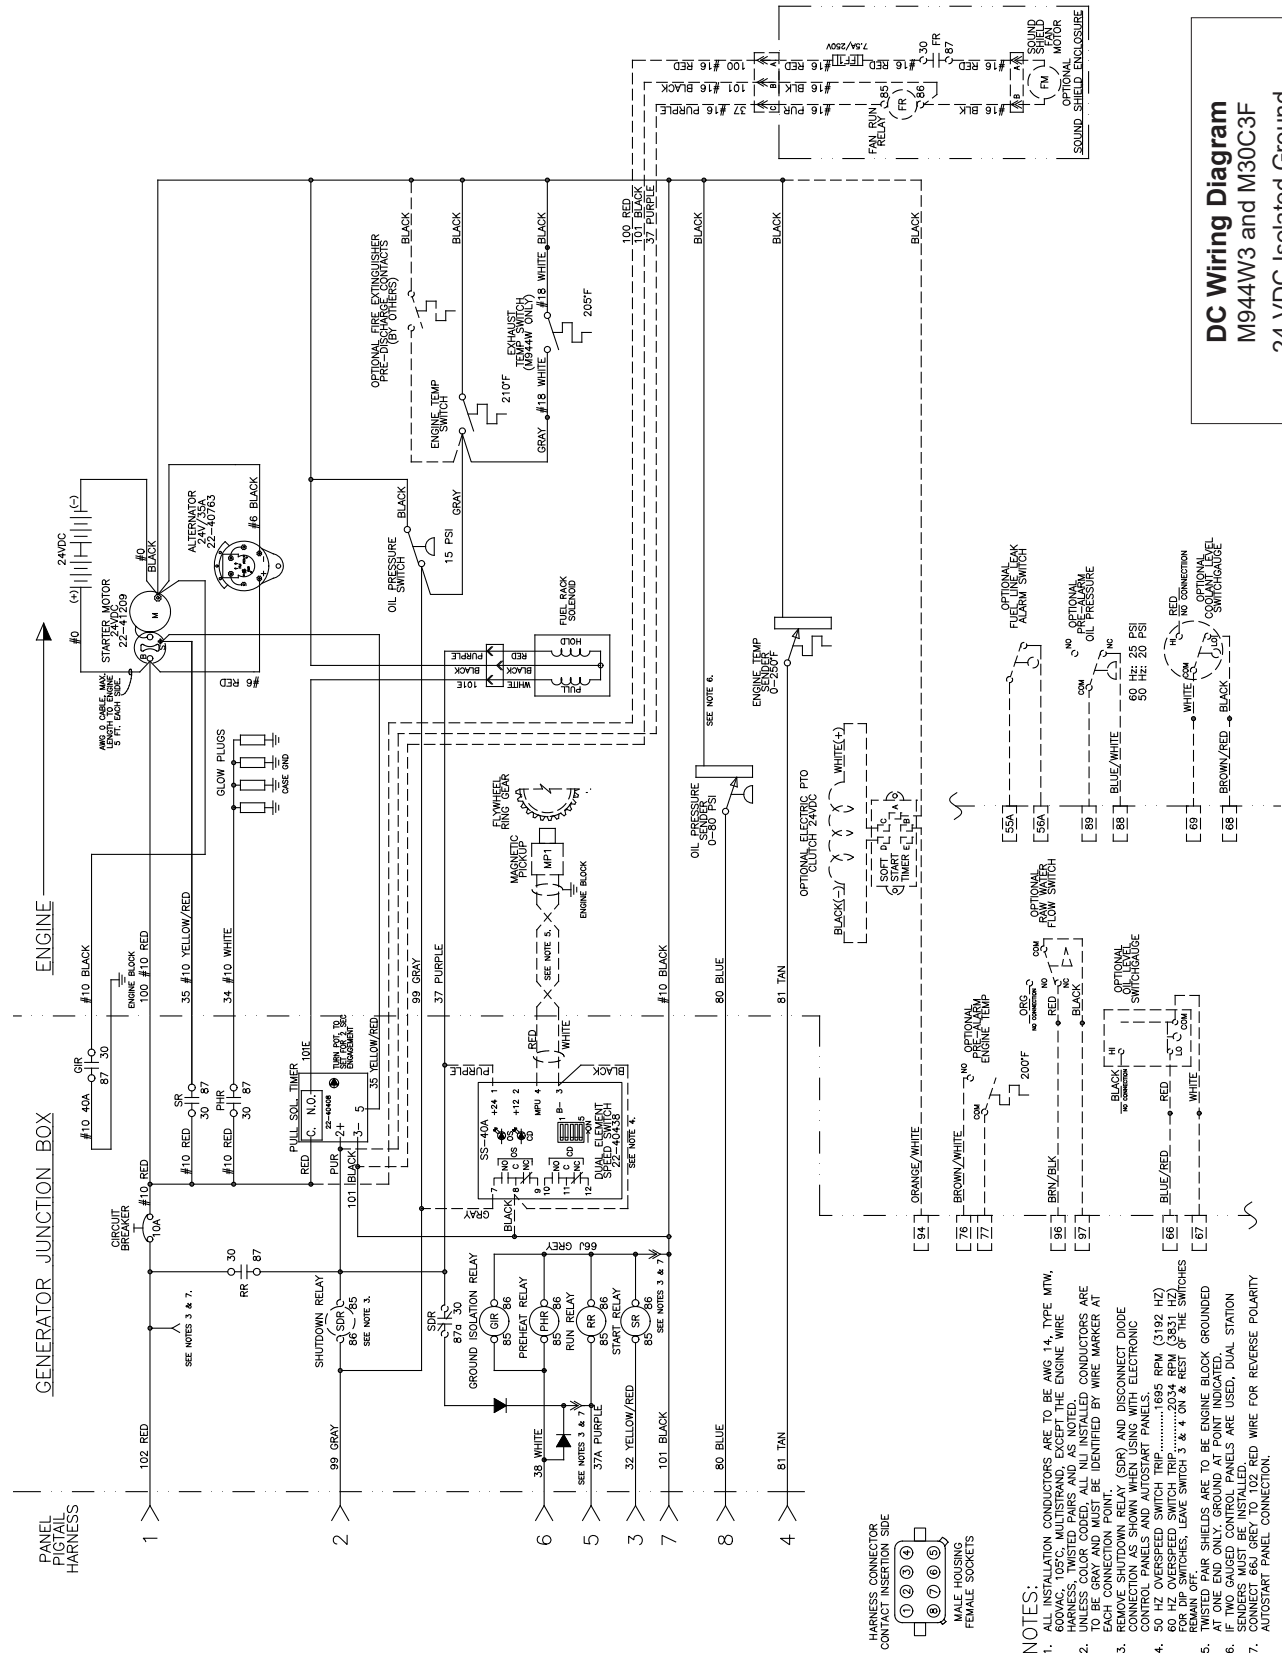


**DC Wiring Diagram**  
M944W3 and M30C3F  
24 VDC Isolated Ground  
C-7262D





## DC Wiring Diagram

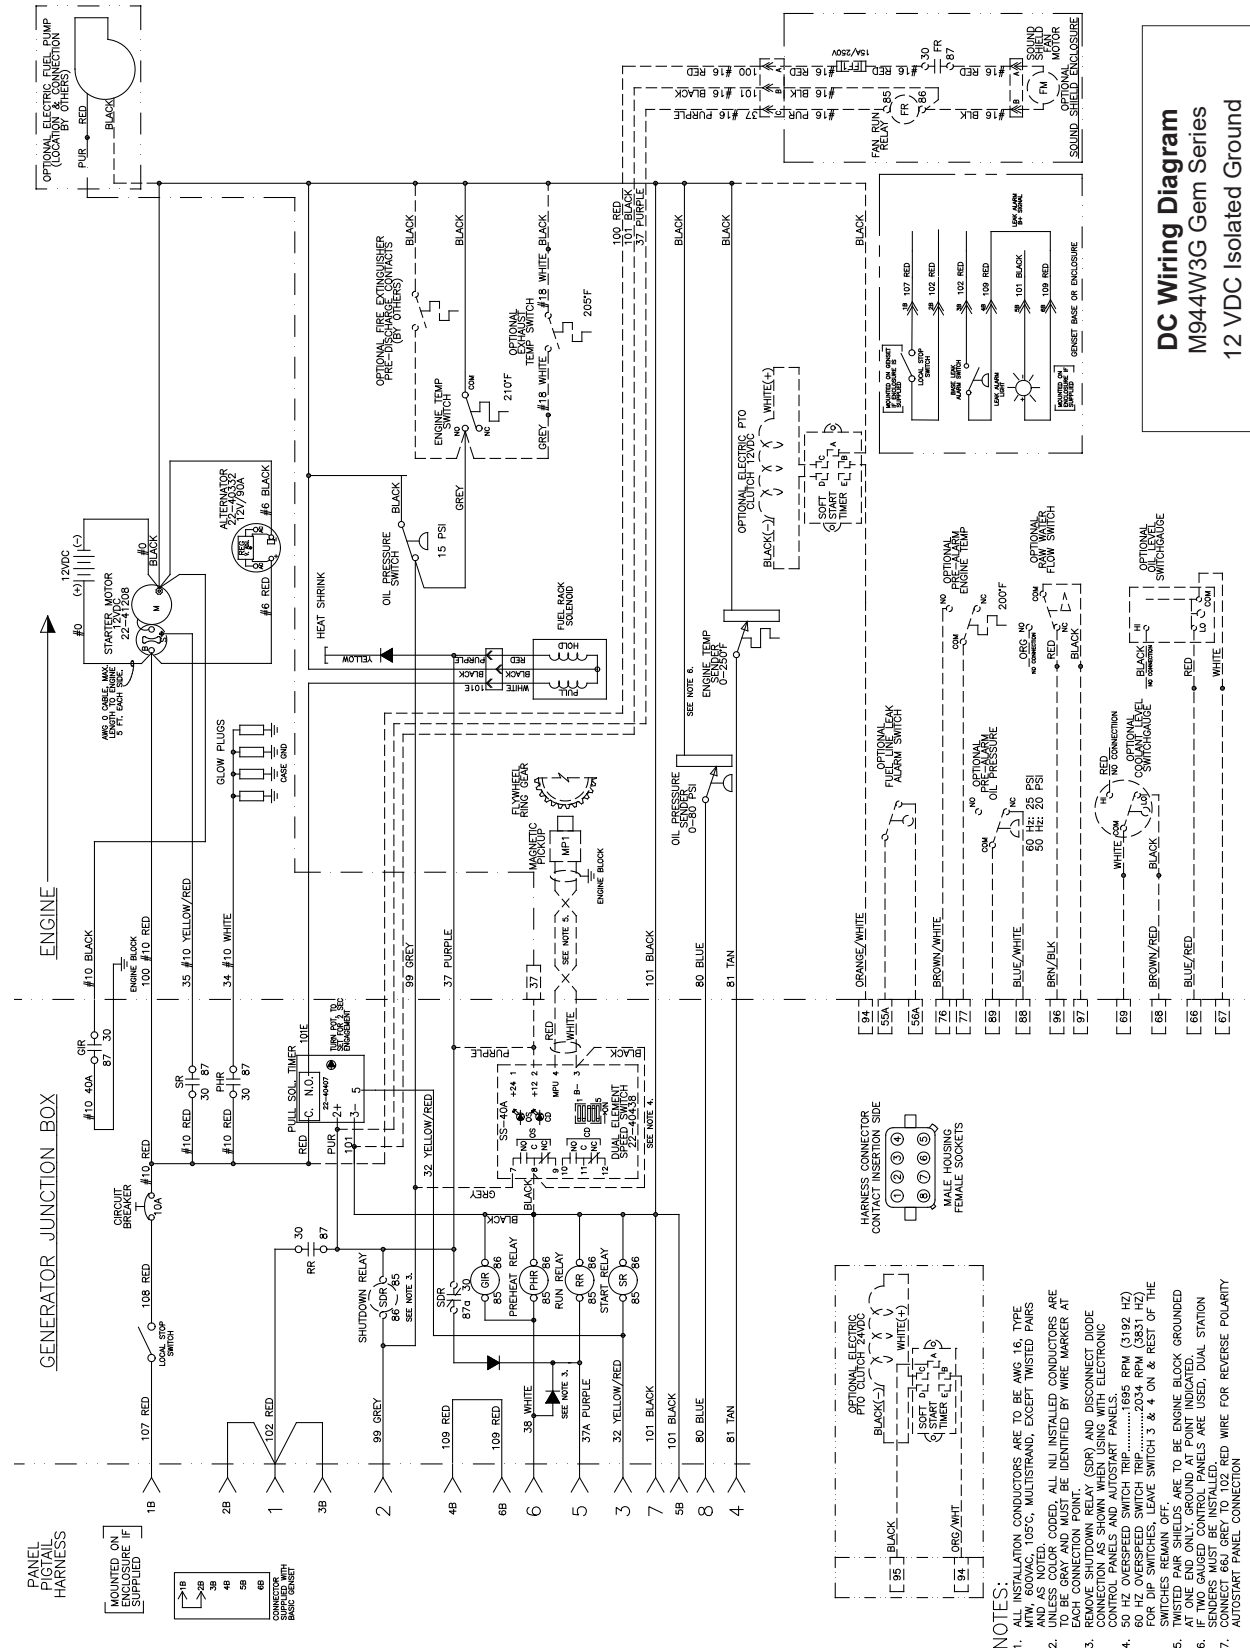

**DC Wiring Diagram**  
M944W3G Gem Series  
12 VDC Isolated Ground  
C-7452A




1. 1. TWISTED PAIR CONDUCTORS ARE TO BE AWG. 16, TYPE MTW, 60/30AW, 105°C, MULTISTRAND, EXCEPT TWISTED PAIR 4, NOTED.
2. 2. UNLESS COLOR CODED, ALL NLI INSTALLED CONDUCTORS ARE TO BE IDENTIFIED BY FIRE MARKER AT EACH CONNECTION POINT.
3. 3. REMOVE SHUTDOWN RELAY (SDR) AND DISCONNECT DIODE CONNECTION AS SHOWN WHEN USING WITH ELECTRONIC CONTROL.
4. 4. 50 HZ OVERSPEED SWITCH TRIP .....1695 RPM (3192 HZ), FOR DIP SWITCHES LEAVE SWITCH 3 & 4 ON & REST OF SWITCHES REMAIN OFF.
5. 5. 60 HZ OVERSPEED SWITCH TRIP .....2034 RPM (3831 HZ), FOR DIP SWITCHES LEAVE SWITCH 3 & 4 ON & REST OF SWITCHES REMAIN OFF.
6. 6. TWISTED PAIR SHIELDS ARE TO BE ENGINE BLOCK GROUNDED AT ONE END ONLY, GROUND AT POINT INDICATED.
7. 7. IF TWO OR MORE CABLES ARE USED, DUAL STATION SENDERS MUST BE INSTALLED.
8. 8. REMOVE STUCK REGULATOR FROM ALTERNATOR AND REPLACE WITH ADJUSTABLE VOLT CELL REGULATOR, PART #22-00039.
9. 9. ADJUSTABLE VOLT CELL REGULATOR, PART #22-00039, POLARITY MUST BE IDENTICAL TO WIRE FOR 8.



Panel Wiring Diagrams



CONTROL PANEL – B+ CONTROL

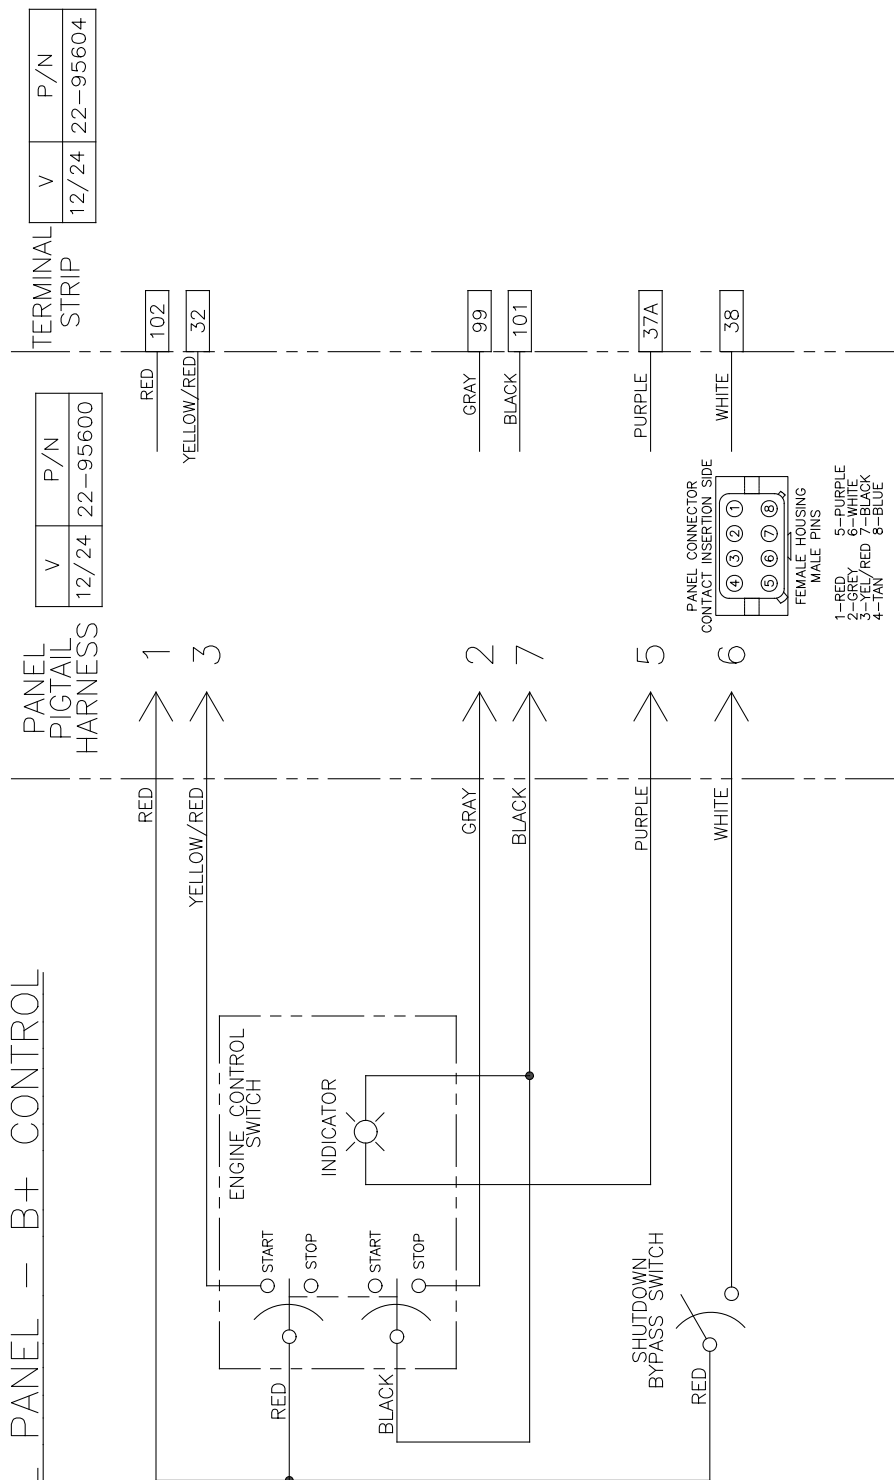

**Panel Wiring Diagram**  
S-1 Panel, B+ Deutsch  
A-12798B

CONTROL PANEL – B+ CONTROL


P/N	12/24V	DIGITAL HOURMETER
22-95605	MTU	
22-95910		
22-95603		

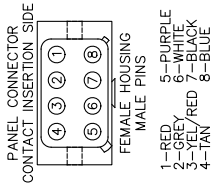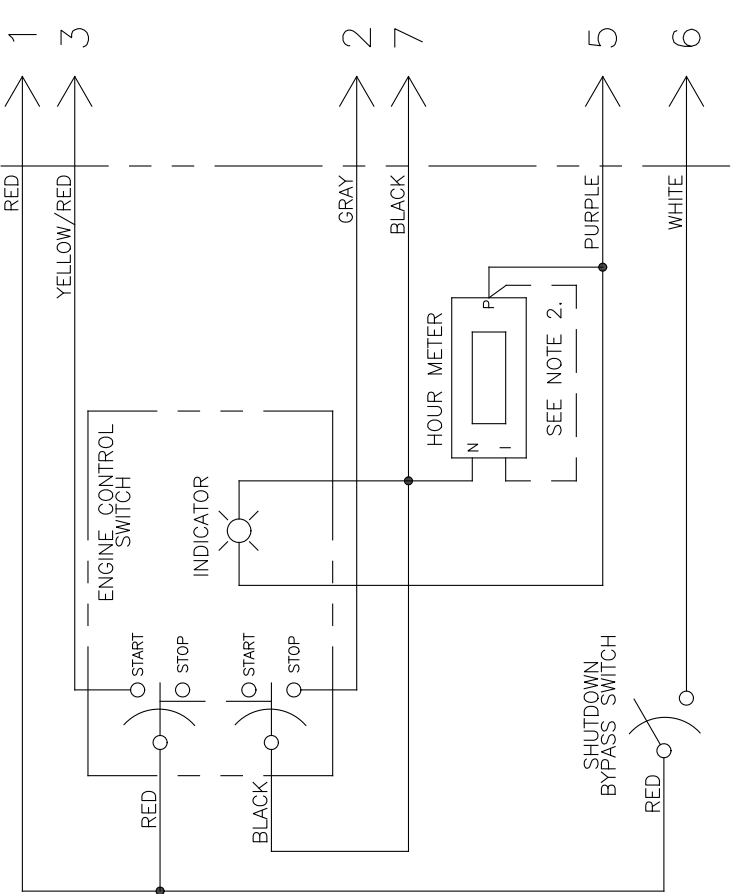

- NOTES:
1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 16, TYPE MTW, 600VAC, 105°C, STRANDED, EXCEPT AS NOTED.
  2. FOR 22-95603, WIRE TERMINAL I ON DIGITAL HOURMETER TO TERMINAL P. (REFERENCE A-12570)

Panel Wiring Diagram  
S-1B Panel, B+  
A-12791C


Panel Wiring Diagrams

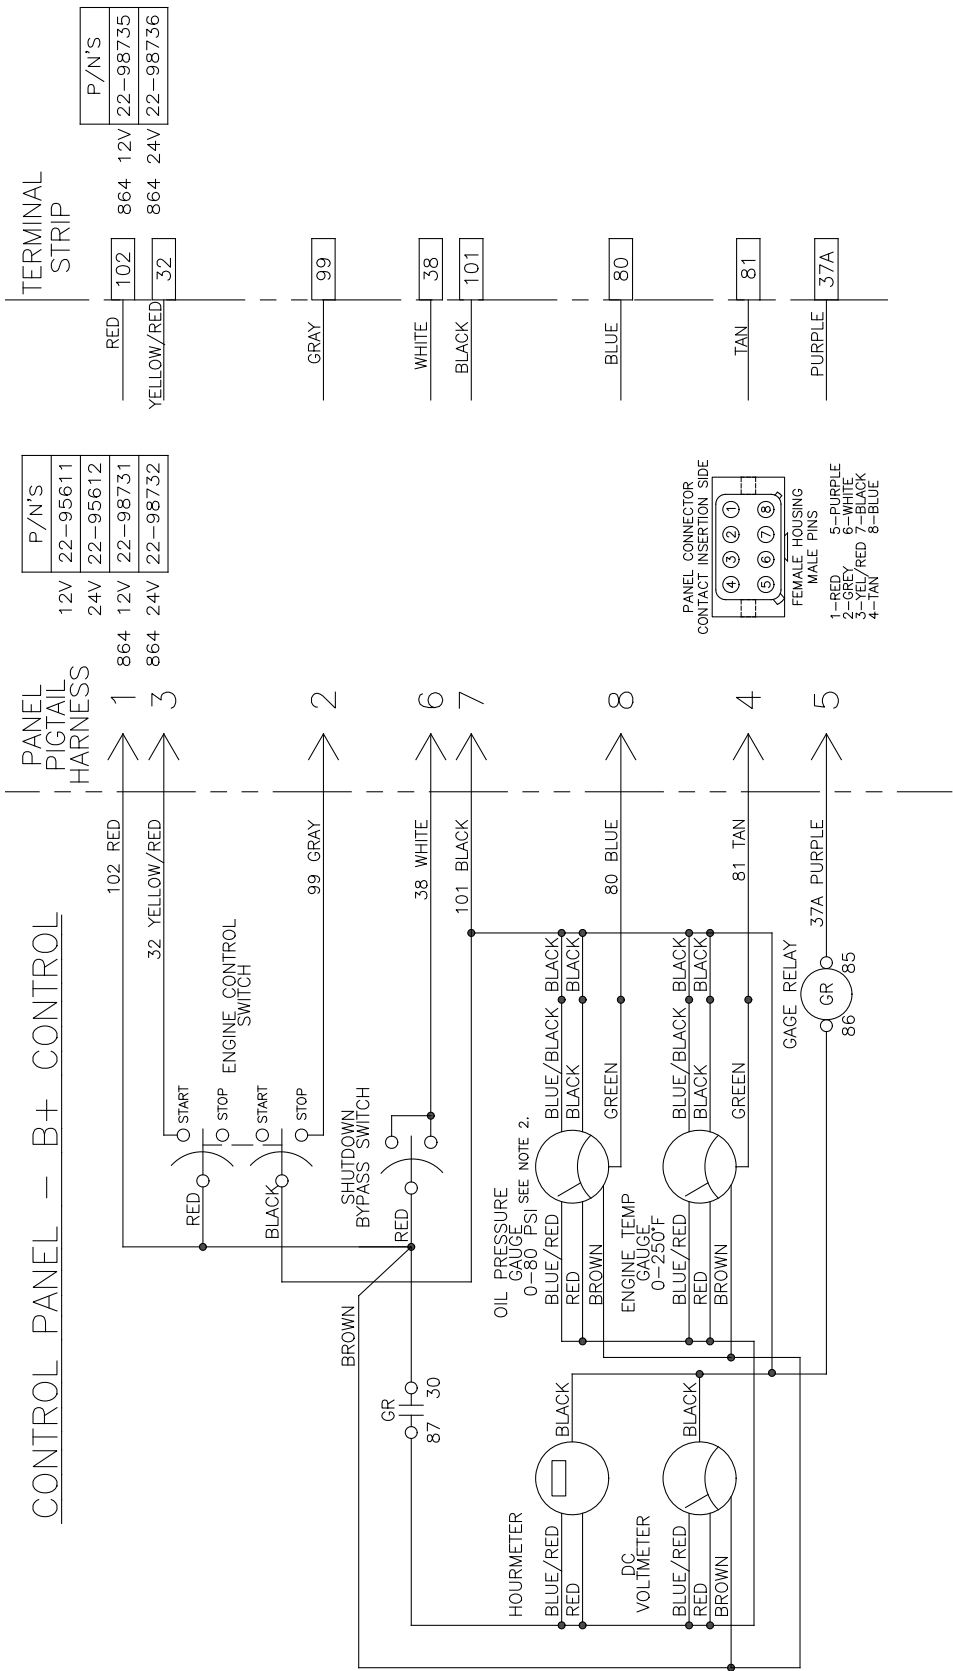

NOTES:

1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 16, TYPE MTW, 600VAC, 105°C, STRANDED, EXCEPT AS NOTED.
2. OIL PRESSURE GAUGE IS TO BE 0-150 PSI ON PANELS 22-98731 & 22-98732.


Panel Wiring Diagram  
S-3B/S-3C Panel, B+ Deutsch  
A-12790D



### Panel Wiring Diagram




# AC Wiring Diagram

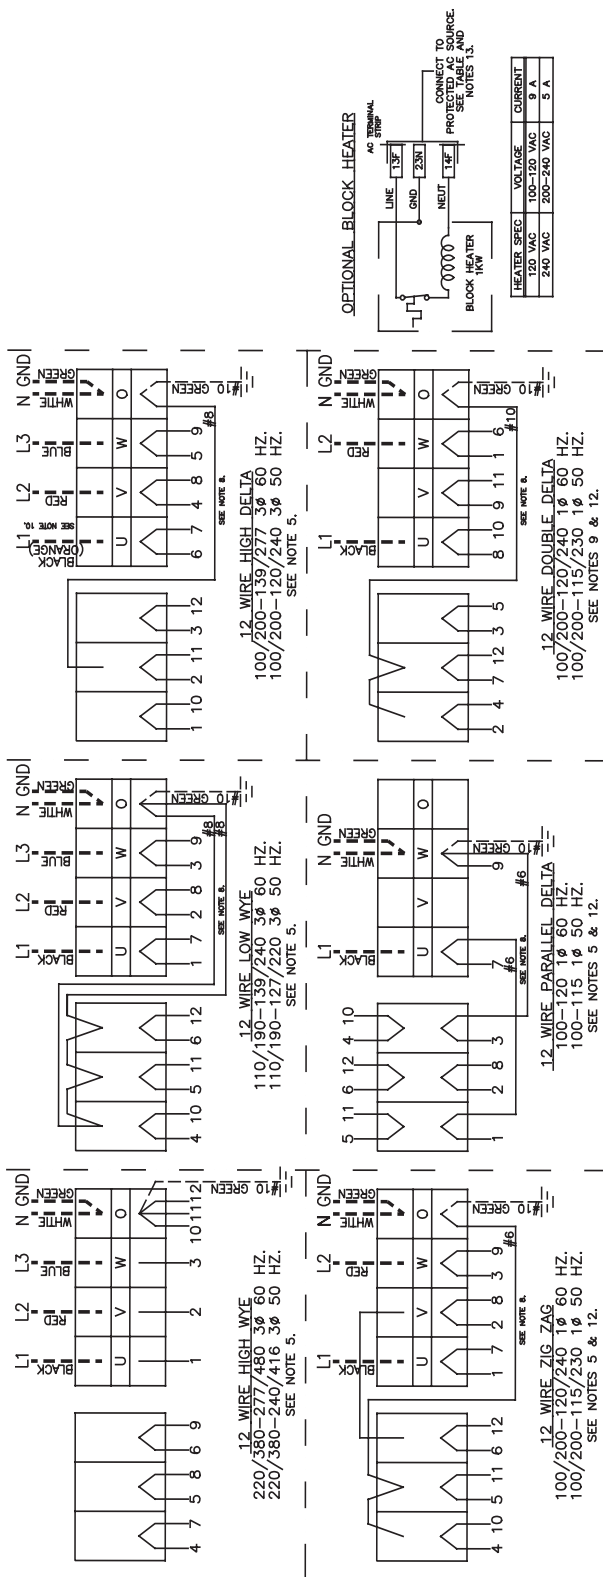

## NOTES:

1. ALL NLI INSTALLED CONDUCTORS ARE TO BE TYPE MTW, 105°C, STRANDED, 600VAC.
2. SET SW2 FOR CURRENT APPLICATION, (50 OR 60 HZ).
3. SET SW3 PER CURRENT APPLICATION IF REMOTE VOLTAGE ADJUST REHEAT IS USED.
4. THE CONDUCTORS ARE TO BE MARKED ORANGE WHEN NEUTRAL IS PRESENT, IN ACCORDANCE WITH ARTICLE 215-8 OF THE NATIONAL ELECTRIC CODE.
5. DELETE NEUTRAL CONDUCTOR (AND JUMPER IF PRESENT), IF LOWER VOLTAGE IS NOT REQUIRED.
6. MARINE GENSETS ARE GROUNDED BY CUSTOMER, AT CUSTOMER'S DISCRETION, INDUSTRIAL GENSETS ARE TO BE GROUNDED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY APPLICABLE LOCAL CODES.
7. SIZING TO BE DETERMINED PER INSTALLATION.
8. NEUTRAL CONDUCTORS SIZED FOR 30KW UNITS AT THE LOWEST LISTED VOLTAGE. CONSULT N.L.I. ENGINEERING.
9. THE CONDUCTORS SIZING AT OTHER GENSET VOLTAGE/RW RATINGS ARE TO BE DETERMINED AS FOLLOWS: DISCONNECT LEADS 3, 4, AND 4 FROM AVR. DISCONNECT LEAD 3 TO AVR TERM. 4 (THROUGH C.B.). CONNECT LEAD 4 TO AVR TERM. 3. DISCONNECT LEAD E3 FROM AVR AND ISOLATE. CONNECT AVR TERMINAL E3 TO MAIN OUTPUT BLOCK TERM. "W".
10. USING RED WIRE AS LEAD 3 TO BE MARKED ORANGE WHEN NEUTRAL IS PRESENT, IN ACCORDANCE WITH ARTICLE 215-8 OF THE NATIONAL ELECTRIC CODE.
11. AVR INPUT SENSING SWITCH SW1 IS TO BE SET TO THE 200V POSITION FOR ALL VOLTAGES EXCEPT 240VAC.
12. THE 1Ø WIRING OPTIONS ARE FOR MODEL M200RW3 ONLY.
13. DO NOT ENERGIZE HEATER WHEN UNIT IS IN OPERATION.

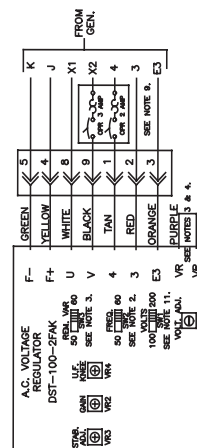

**AC Wiring Diagram**  
M944W3 and M30CW3  
12-Wire  
B-9723D

# NON-CURRENT MODEL

**NOTES:**

1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14, TYPE NMW, 600VAC, 105°C, MULTISTRAND, EXCEPT THE ENGINE WIRE HARNESS, TWISTED PAIRS AND AS NOTED.
2. WIRELESS COORD. CODED, ALL NLI INSTALLED CONDUCTORS ARE TO BE GREEN. THIS MUST BE IDENTIFIED BY WIRE MARKER.
3. REMOVE SHUTDOWN RELAY (SDR) AS SHOWN WHEN USING WITH WAVENET PANELS.
4. 50 HZ OVERSPEED SWITCH TRIP .....1695 RPM (3192 HZ)
5. 60 HZ OVERSPEED SWITCH TRIP .....2034 RPM (3393 HZ)
6. TWISTED PAIR SHIELDS ARE TO BE ENGINE BLOCK GROUNDING.
7. IF TWO CAUSED CONTROL PANELS ARE USED, DUAL STATION SENDERS MUST BE INSTALLED.





**NOTES:**

1. ALL CABLE CONNECTION CONDUCTORS ARE TO BE AWG 14, TYPE 1.
2. ALL WIRE, CABLE, 100% CROSSED, ALL INSTALLED CONDUCTORS ARE TO BE GREY AND MUST BE IDENTIFIED BY WIRE MARKER AT EACH CONNECTION POINT.
3. REMOVE SHUTTER PANELS (SPR) AS SHOWN WHEN
4. 50 HZ OVERSPEED SWITCH TRIP 1695 RPM (3192 HZ)
5. 60 HZ OVERSPEED SWITCH TRIP 2028 RPM (3851 HZ)
6. IF ONE END ONLY, TRIP END IS TO BE UNGROUND
7. IF TWO ENDS ONLY, TRIP ENDS ARE TO BE UNGROUND
8. IF TWO CAUSED CONTROL PANELS ARE USED, DUAL STATION
9. HIGH EXHAUST TEMP. SWITCH IS OPTIONAL ON M300 UNITS.

# NON-CURRENT MODEL



**NOTES:**


1. ALL INSULATION CONDUCTORS ARE TO BE AWG 14, TYPE THHN, 90°C, MULTISTRAND, EXCEPT TWISTED PAIRS AND WIRE MARKER.
2. UNLESS COLOR CODED, ALL ALI INSTALLED CONDUCTORS ARE TO BE IDENTIFIED BY WIRE MARKER.
3. REMOVE SHUTDOWN RELAY (SOR) AS SHOWN WHEN USING WITH WAVENET PANELS.
4. 1805 RPM (3102 HZ) 60 HZ OVERSPEED SWITCH TRIP
5. 2034 RPM (3631 HZ) 60 HZ OVERSPEED SWITCH TRIP
6. TWISTED PAIR SHIELDS ARE TO BE ENGINE BLOCK GROUND AT ONE END ONLY, GROUND AT POINT INDICATED.
7. ALL WIRE PANELS ARE TO BE INSTALLED.
8. SENDERS MUST BE INSTALLED.



**NOTES:**

1. ALL INSULATION CONDUCTORS ARE TO BE AWG 14, TYPE 75, RYOVAC, TUSTC, MULTISTRAND, EXCEPT THE ENGINE WIRE HARNESS, TUSTC, MULTISTRAND, AS NOTED.
2. UNLESS COLOR CODED, ALL NLI INSTALLED CONDUCTORS TO BE IDENTIFIED BY WIRE MARKER AT EACH CONNECTION POINT.
3. REMOVE SHUTDOWN RELAY (SDR) AS SHOWN WHEN EQUIPPED WITH WAVENET PANELS.
4. REMOVE SHUTDOWN RELAY (SDR) AS SHOWN WHEN EQUIPPED WITH WAVENET PANELS.
5. 60 HZ OVERSEERD SWITCH TRIP ..... 2034 RPM (3192 HZ)
6. TWISTED PAIR SHIELDS ARE TO BE ENGINE BLOCK GROUND ON ALL CONDUITS, AND GROUND AT POINT INDICATED.
7. ALL CONDUITS AND CABLES ARE TO BE INSTALLED AT STATION SENDERS MUST BE INSTALLED.

# Panel Wiring Diagram

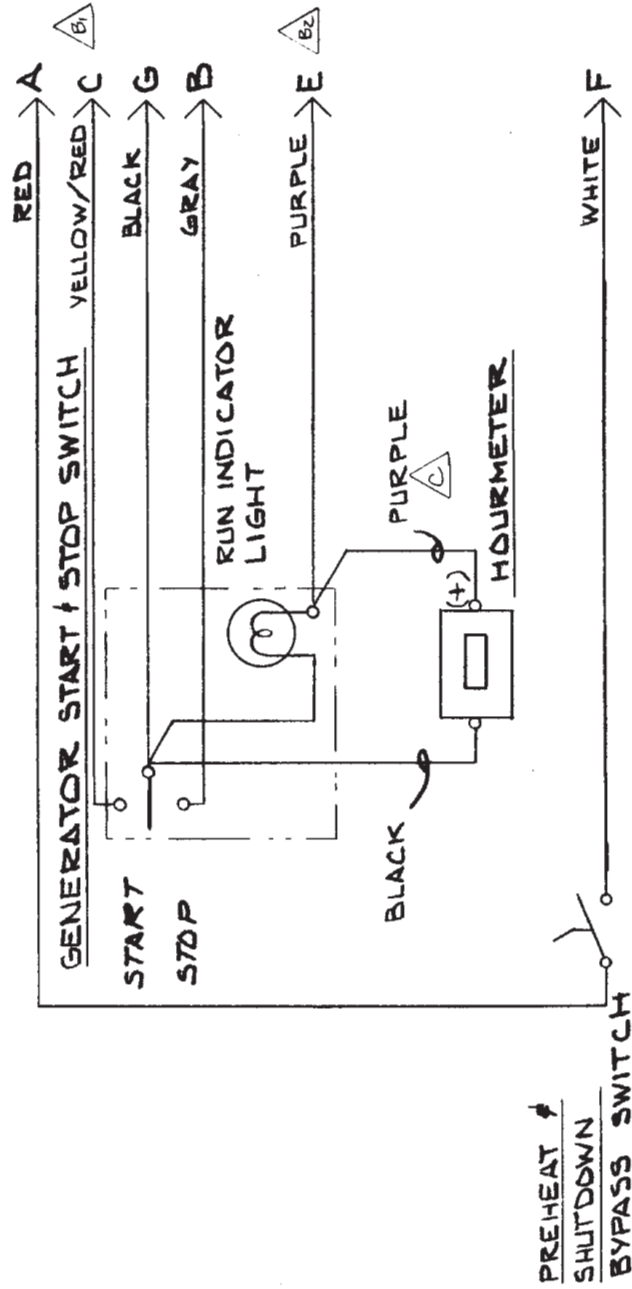


Panel Wiring Diagram

S-1B

12 Volt

Drawing A-3170

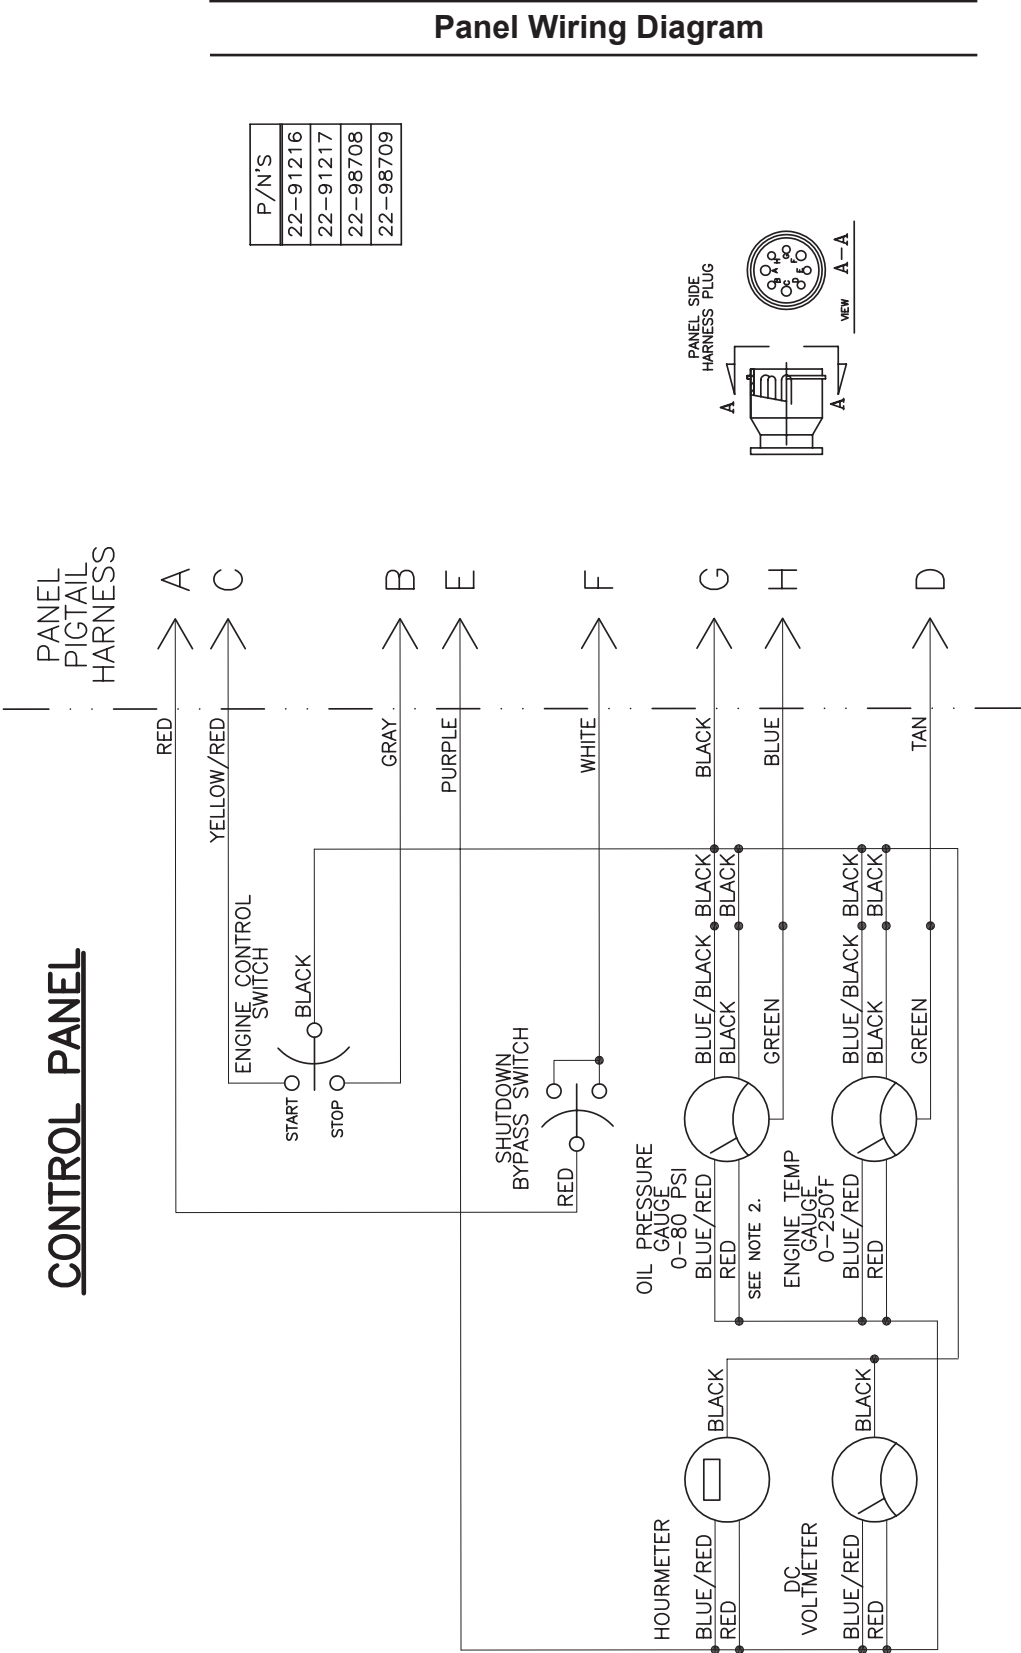


**Panel Wiring Diagram**  
S-3C  
Drawing A-12645A

- NOTES:
1. ALL INSTALLATION CONDUCTORS ARE TO BE AWG 14, TYPE MTW, 600VAC, 105°C, STRANDED, EXCEPT AS NOTED.
  2. OIL PRESSURE GAUGE IS TO BE 0-150 PSI ON PANELS 22-98708 & 22-98709.



# Panel Wiring Diagram

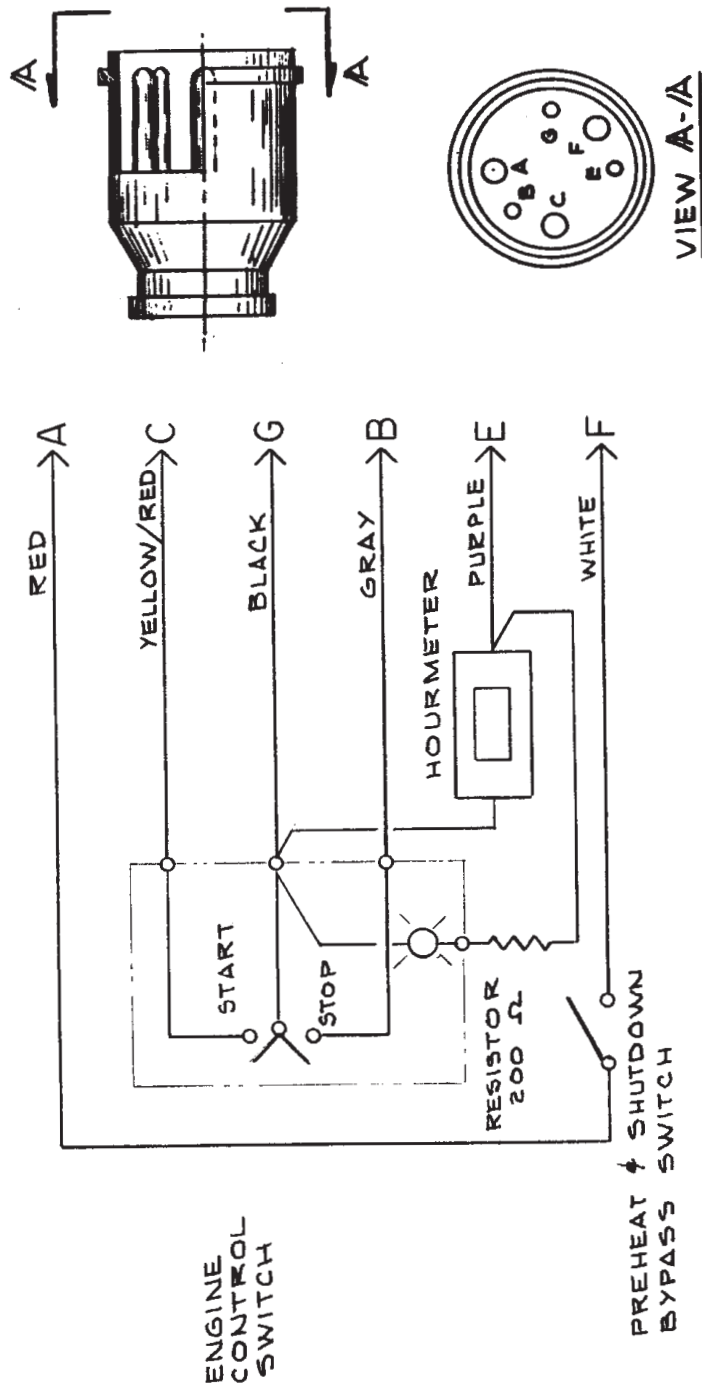

BOM A-4791

Panel Wiring Diagram  
S-1B  
24Volt  
Drawing A-4792







4420 14th Ave. NW., Seattle WA 98107

Tel: (206) 789-3880 • 1-800-762-0165 • [www.northern-lights.com](http://www.northern-lights.com)

Northern Lights and Lugger are registered trademarks of Northern Lights, Inc.

© 2022 All rights reserved. Litho USA.